

bemodern®

FIREPLACES & STOVES | BATHROOM FURNITURE

DIAMOND

Luxury Fireplaces

IQFX 16" Fire Spacer





(Surround, Back Panel & IQFX Fire supplied Separately)

Models Covered:

IQFX 16" Fire

	Page
Spacer Installation in Timber Suite	2-6
Spacer Installation in Marble Suite	7-10
Maintenance/ Important Note	11

Parts & Fittings Supplied.

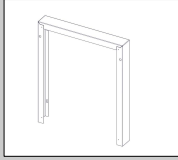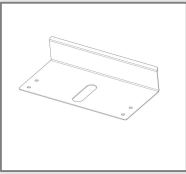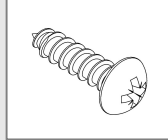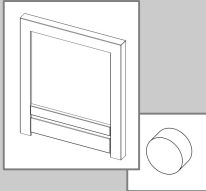REF	PARTS	DIAGRAM	QTY	REF	PARTS	DIAGRAM	QTY
A BOX-1	Fire Spacer		1	D BOX-1	35mm x 12mm OD Nylon Spacer		4
B BOX-1	Marble Installation Bracket		1	E BOX-1	4 X 16mm DOME-HEAD		4
C BOX-1	3.5mm x 50mm CSK POZI Screw		4	F BOX-2	16" Fire Trim & 5 x 10mm Dia. Magnets		

Tools Required (not supplied)

•Drill •Pencil •Screw Driver •Ruler •Tape Measure

Before you start

DO NOT dispose of the packaging until you have checked and made sure you have all the parts and fittings listed above. If not, contact: **BE MODERN - HELPLINE 0191 430 0901** who will be able to assist you with this and any other problems you may encounter.

When you are ready to start, make sure that you have the right tools to hand, plenty of space and a clean dry working area.

NOTE: Protect the surface you are working on to prevent any possible damage to the fire surround or floor.


Care

To maintain the appearance of your new trim & spacer we recommend that it is dusted using a lint free cloth. **NEVER** use any form of abrasive or **DAMP** cloth.


Spacer Installation in Timber Suite

Place the Spacer (A), centrally over the surround back panel cut out.

Confirm the trim legs are parallel and plumb.

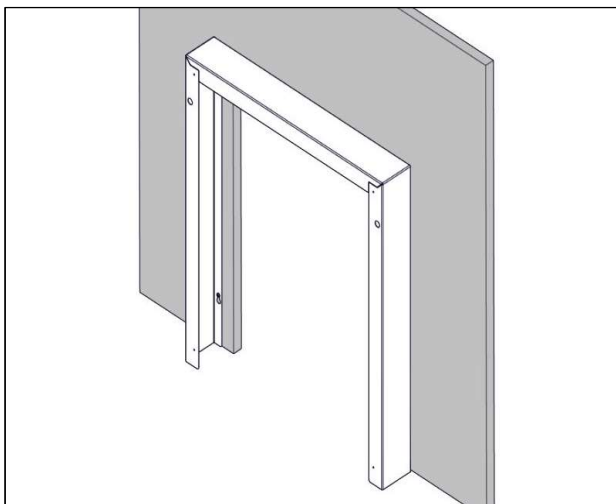


Mark the top centre point of the 4 keyholes in the Spacer. (A)

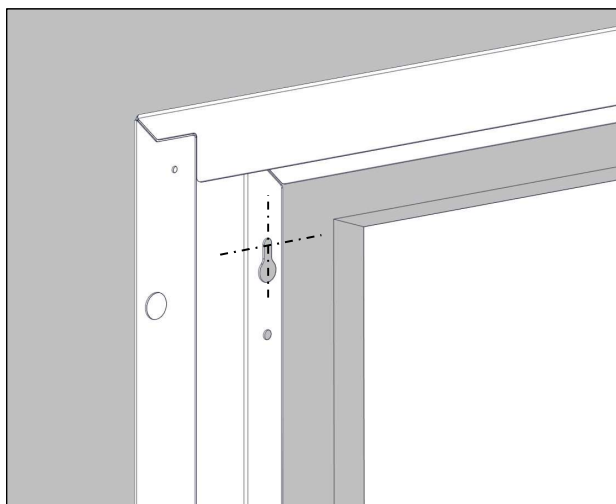


Pilot hole the centre points.


Screw 4 x 4 X 16mm DOME-HEAD screws (E) into the back panel, leaving the screw heads off-set from the back panel by a couple of millimeters.

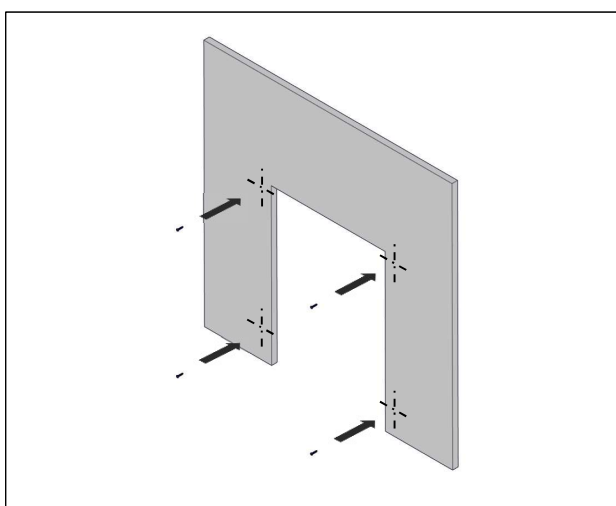

Lift the Spacer (A) over the installed screw heads.

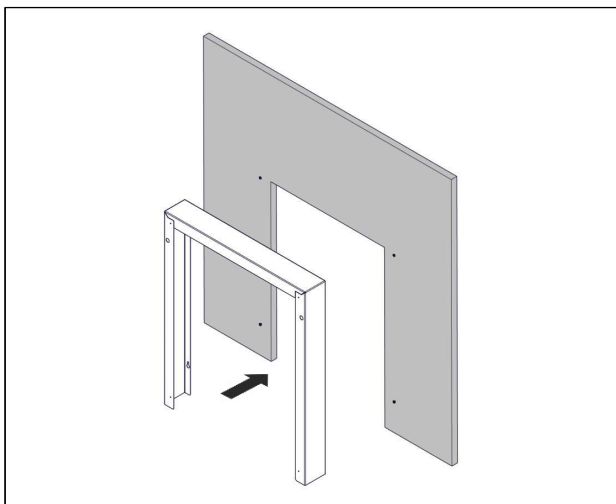


Lower the Spacer (A) down onto the 4 screw heads. Securing in place.

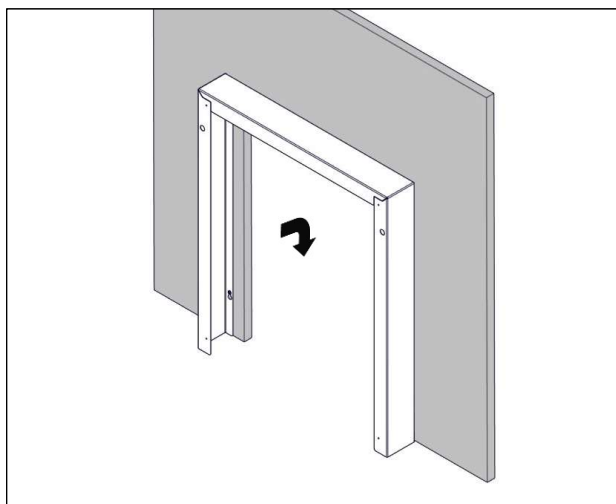


Place the fire in position over the Spacer (A) and route the power cable to the rear of the Surround.

Working from the top left of the fire, place the 35mm Nylon Spacers (D) between the Fire and the Spacer (A).

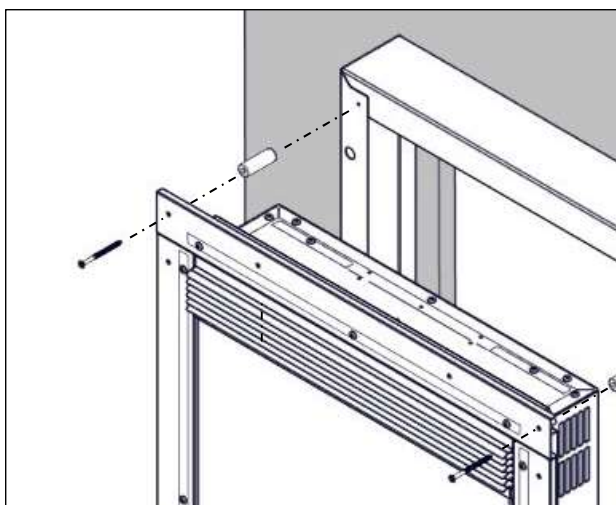


Securely screw the fire to the Spacer (A), using 4 x 3.5mm x 50mm CSK POZI Screws. (C)


The screws should go through the Nylon Spacers (D) in to the hole on the Spacer (A).

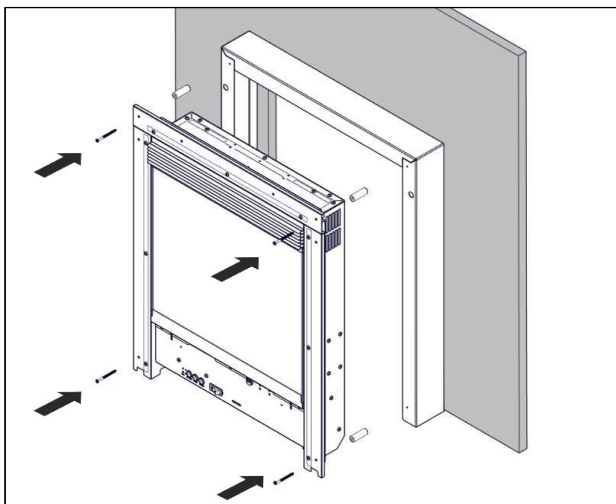


Fire in position.

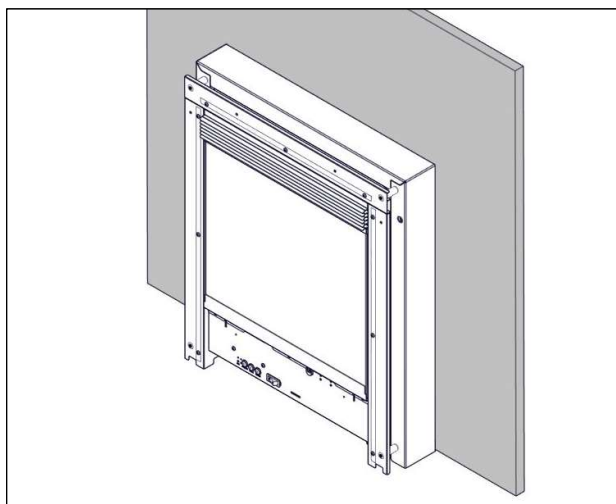

Place the 4 X Trim Magnets (F) supplied with the Trim, on the Trim rear face. Place 1 Magnet (F) supplied with the Trim on the rear of the Trim fret drop down door.

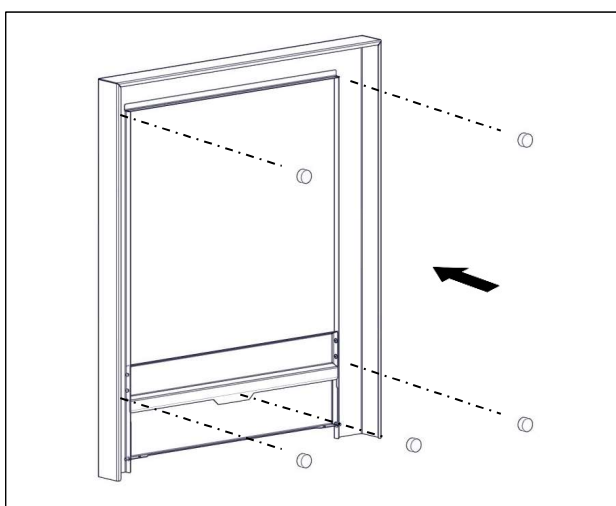


Note the positions of the Magnets.

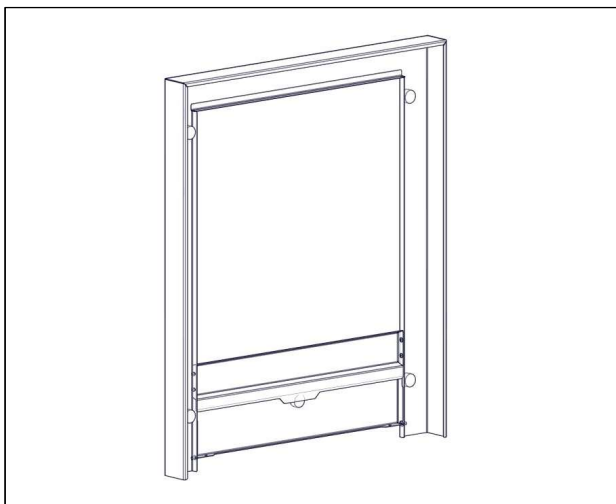

Place the trim over the fire.


The magnets will hold the trim securely in place.

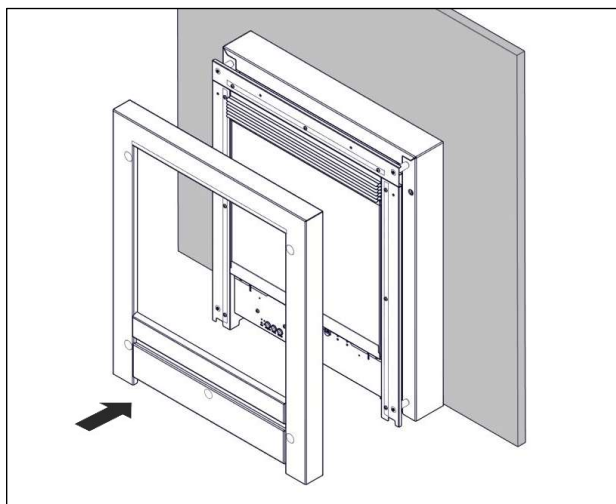

The installation of the Spacer (A), Fire and Trim is complete.


For information on how to dress the fuel bed and position the logs, please scan the QR code detailed on Page 11 or follow the link to our website/2D Installation/ Manual No.-200887.

For fire operating instructions please scan the QR code detailed on Page 11 or follow the link to our website/2D Installation/ Manual No.-200887.

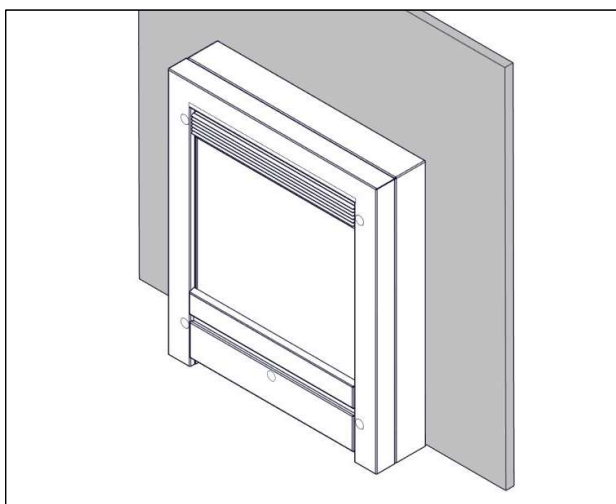


Spacer Installation in Marble Suite

Place the Marble Installation Bracket (B) on the Fire as indicated in the image, for a 20mm thick back panel installation.

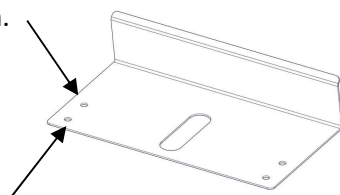


For a 40mm back panel installation, move the Installation Bracket (B) back and use the bracket front fixing holes.

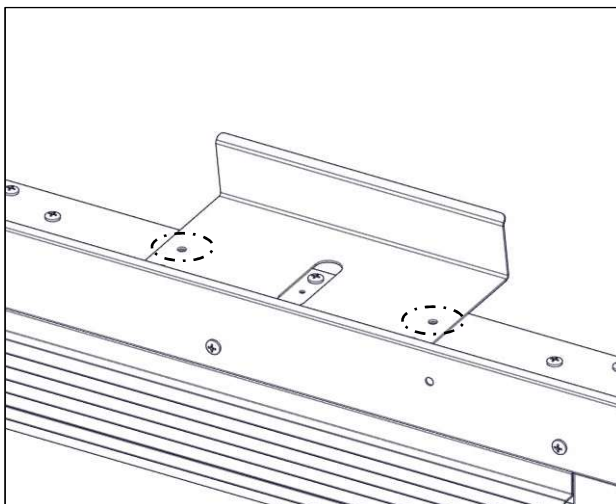


Remove the two screws from the fire which line up with the holes in the Marble Installation Bracket (B).

Screw the Marble Installation Bracket (B) in place with the screws removed from the Fire.

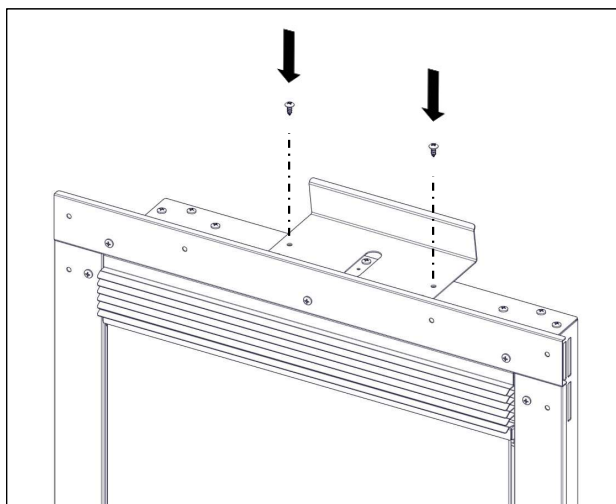


Detail of Marble Installation Bracket (B) in place.

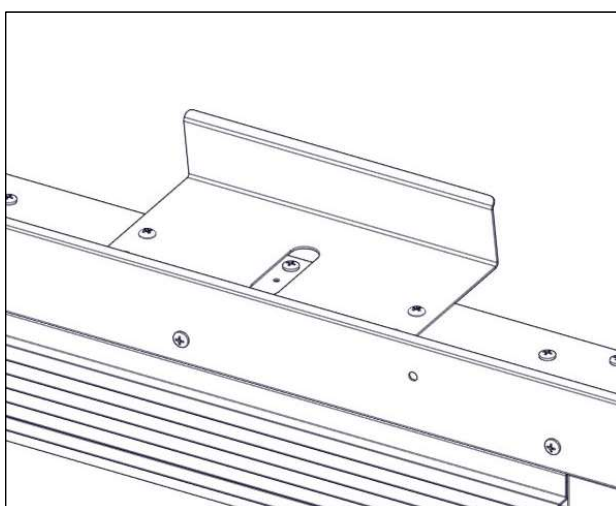


Place the fire in position over the Spacer (A), placing the 35mm Nylon Spacers (D) between the Fire and the Spacer (A).

Screw through the Nylon Spacers (D) in to the Spacer (A) using 4 x 3.5mm x 50mm CSK POZI Screws. (C)

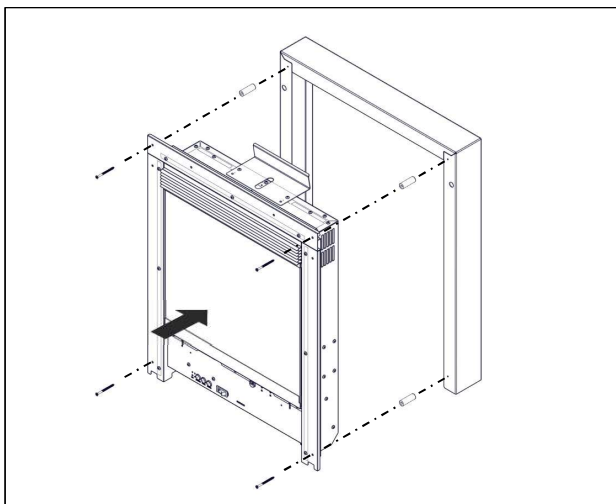


Once Spacer (A) and Marble Installation Bracket (B) are installed on the fire. Line the fire up with the Back Panel opening.


Route the power cable to the rear of the Surround.

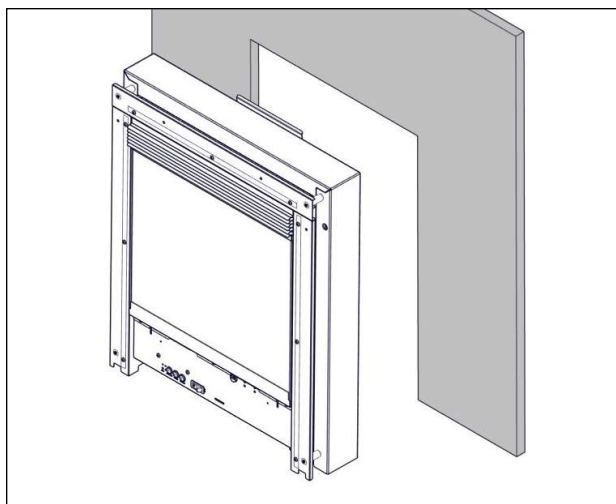


Angle the fire down to allow the Marble Installation Bracket (B) to hook under the back panel cut-out.

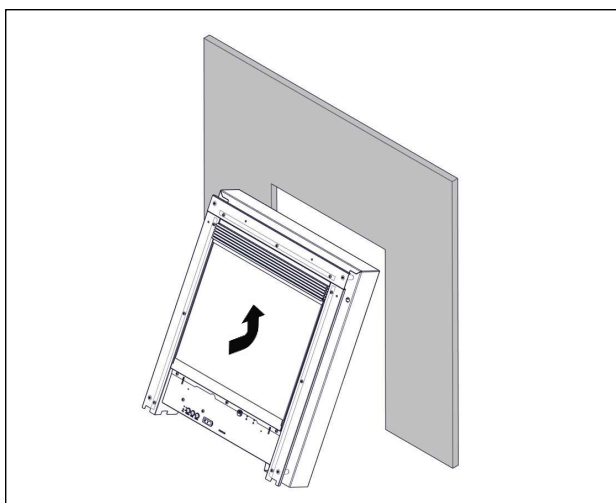


Fire in position.

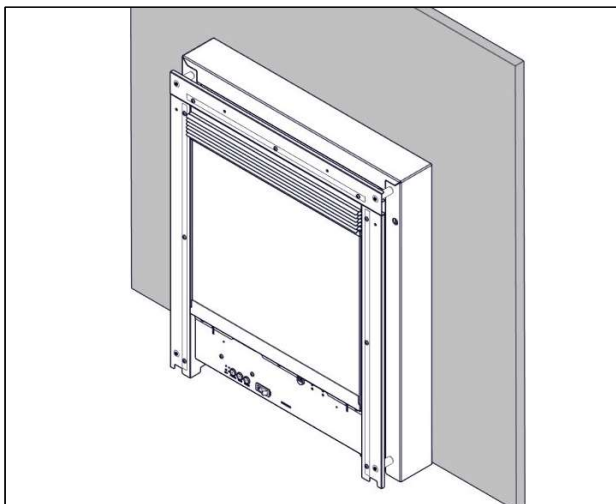

Place the 4 Trim Magnets (E) supplied with the Trim, on the Trim rear face. Place 1 Magnet (E) supplied with the Trim, on the rear of the Trim fret drop down door.

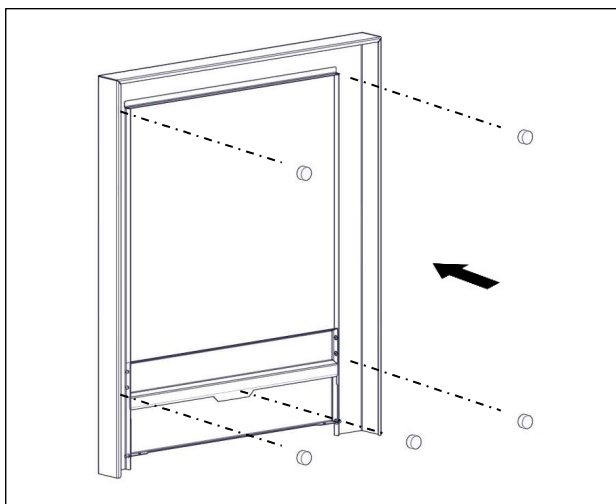


Note positions of the Magnets.

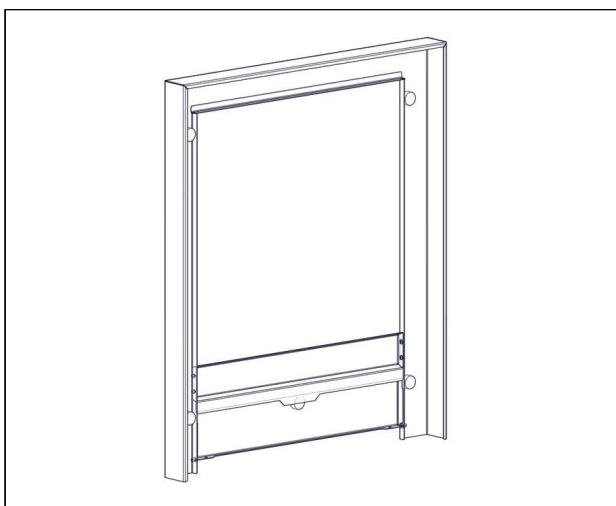

Place trim over fire.

The magnets will hold the trim securely in place.

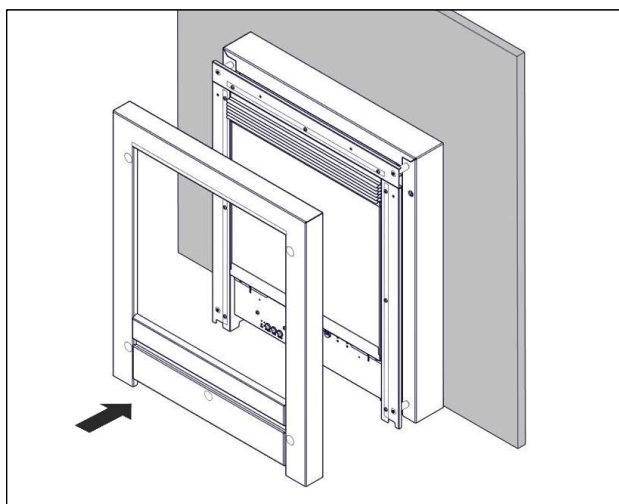


The installation of the Spacer (A), Fire and Trim is complete.

Note: The assembly will angle forward slightly all leave a gap at the top, however it will not fall out of the opening- it is not designed to be a tight fit.

For information on how to dress the fuel bed and position the logs, please scan the QR code detailed on Page 11 or follow the link to our website/2D Installation/ Manual No.-200887.

For fire operating instructions please scan the QR code detailed on Page 11 or follow the link to our website/2D Installation/ Manual No.-200887.

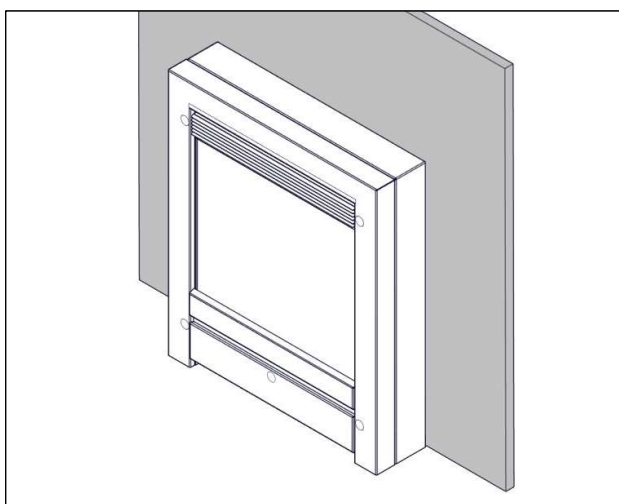

WARNING: Before any maintenance or whilst cleaning the exterior of the fireplace, the unit should be disconnected from the power supply until it has cooled down.

Cleaning the Fire

Cleaning or polishing products are not recommended. Fingerprints or other marks on the front glass panel can be removed by a piece of soft, damp, lint-free cloth with a good quality household glass cleaner. The front glass panel should always be completely dried with a clean, lint-free cloth or paper towel.

CAUTION: Abrasive cleaners should not be used on the glass panel. Liquids should not be sprayed directly onto any surface of the unit.

Troubleshooting

Should you have any queries regarding this product please contact Customer Services on 0191 4300901 (option 4) or email us at customerservices@bemodern.co.uk

Recycling

All cardboard packing is recyclable



Scan here for detailed installation and user instructions and guidance videos or download from <https://www.bemodern.com/diamondfireplaces/support/downloads/>



IMPORTANT NOTE:

Wall fixings (i.e. screws/wall plugs etc.) are not supplied as these are crucially dependent upon the type of wall and surface the Suite is going to be fixed too.

The installer is therefore responsible for ensuring that suitable fittings are used as well as individual fitting situations and environments. All mechanical fixings, for holding the Suite in position, must be secured to a solid wall or structure.

Where appropriate please recycle packaging responsibly.