

bemodern®

FIREPLACES & STOVES | BATHROOM FURNITURE

DIAMOND

Luxury Fireplaces

Wall Mounted- Marble Suites Instructions For Assembly & Installation

(Surround, Back Panel & IQFX Fire Supplied Separately)

Models Covered:

4250












Marble Wall Mounted Suites

Including

IQFX 750L /1000L

	Page
Parts & Fittings Supplied	2
Important Information	3
Mount Board Installation	4-5
Hearth Installation	5-6
Surround Main Body Wall Bracket Installation	6-7
Preparing the Fire for Installation	8
Installing the Fire- IQFX 750L- 1000L	9
Optional Mood Lighting Installation	10
Installing the Back Panel Trim	11
Surround Main Body Installation	12
Maintenance/ Important Note	13

Parts & Fittings Supplied.

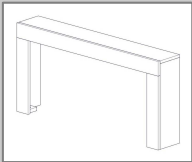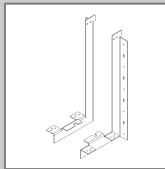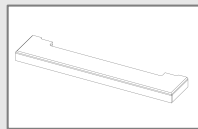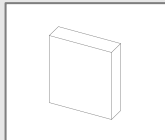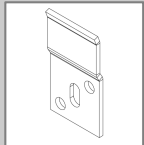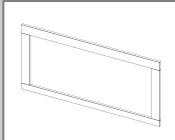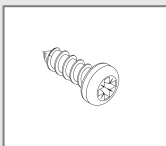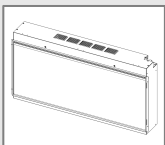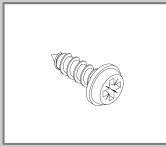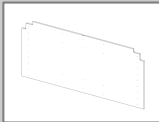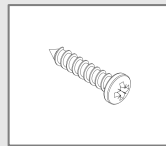REF	PARTS	DIAGRAM	QTY	REF	PARTS	DIAGRAM	QTY
A	Surround Main Body (No back Panel Fitted)		1	G	Wall Hung Bracket Kit Boxed Seperateley.		1 SET
B	Surround Hearth		1	H	Adhesive Pad Supplied with surround.		4
C	Wall Bracket Supplied with surround.		3	J	Back Panel Trim Supplied Separately. Note: Fire Support Stands not required for this installation.		1
D	3.5mm x 12mm Dome Head Screw Supplied with surround		6	K	Fire Supplied Separately.		1
E	3.5mm x 12mm Dome Head Screw Supplied with surround		4	L	Mount Board Supplied with surround.		1
F	4mm x 20mm Dome Head Screw Supplied with surround		18				

Before you start

DO NOT dispose of the packaging until you have checked and made sure you have all the parts and fittings listed above. If not, contact: **BE MODERN - HELPLINE 0191 430 0901** who will be able to assist you with this and any other problems you may encounter.

When you are ready to start, make sure that you have the right tools to hand, plenty of space and a clean dry working area.

NOTE: Protect the surface you are working on to prevent any possible damage to the fire surround or floor.

Tools Required (not supplied) •Drill •Pencil •Screw Driver •Ruler •Tape Measure

Important Information - These instructions are for your safety. Please read them thoroughly before use and retain for future reference. Failure to follow them may result in serious or fatal injury and/or property damage.

Before you begin the installation, please ensure that a full and detailed inspection of all component parts is undertaken jointly by the installer and purchaser to ensure there is no damage or manufacturing defects with the product. Once the fireplace has been installed, no claims or responsibility will be accepted by the manufacturer relating to chips, scratches or any other obvious defects.

Please also ensure you carefully read and fully understand these instructions before commencing installation as we cannot accept responsibility for any damage or defects caused by non-compliance with these instructions.

These instructions are written in accordance with the 'Stone Federation Great Britain' guidance on fire surround standard building practice, Building Regulations (Approved Document J) and all relevant British Standards.

This fireplace should be installed only by competent professional fireplace installers and fitted only to suitable surfaces. You should check with your installer that the constructional elements of the intended chimney breast and flue comply with current Building Regulations, and that they are suitable for the appliance that is to be installed. Failure to do so may result in serious or fatal injury and/or property damage.

NOTE: Installation is not recommended as a DIY or single person task. In addition to this giving rise to the potentially increased risk of product damage and/or incorrect installation, it should also be noted that some marble components can be very heavy and will require two people to lift/handle. Caution should always be exercised if attempting to lift heavy or awkward objects. Always ensure the wall and floor have sufficient load bearing capabilities to allow the surround to be installed safely and securely. The foundation must be sufficient to support the entire weight of the surround.


Following the installation, please leave these instructions with the householder.

Micro Marble Fireplaces

Marble is a natural product formed over millions of years by the Earth's natural evolution process. Consequently no two pieces of marble are exactly the same, and individual fireplaces may be slightly different in veining, marking and shade which gives a unique quality to each and every marble product. Veins, vents and minor pitting are to be expected within marble. These are generally accepted as industry standard and do not detract from the quality of the finished product.

Micro Marble is produced from small pieces of real marble finely crushed and bonded to produce a quality product for your home. Be Modern selects only the highest quality marble to manufacture your fireplace within our UK manufacturing facilities

Mount Board Installation


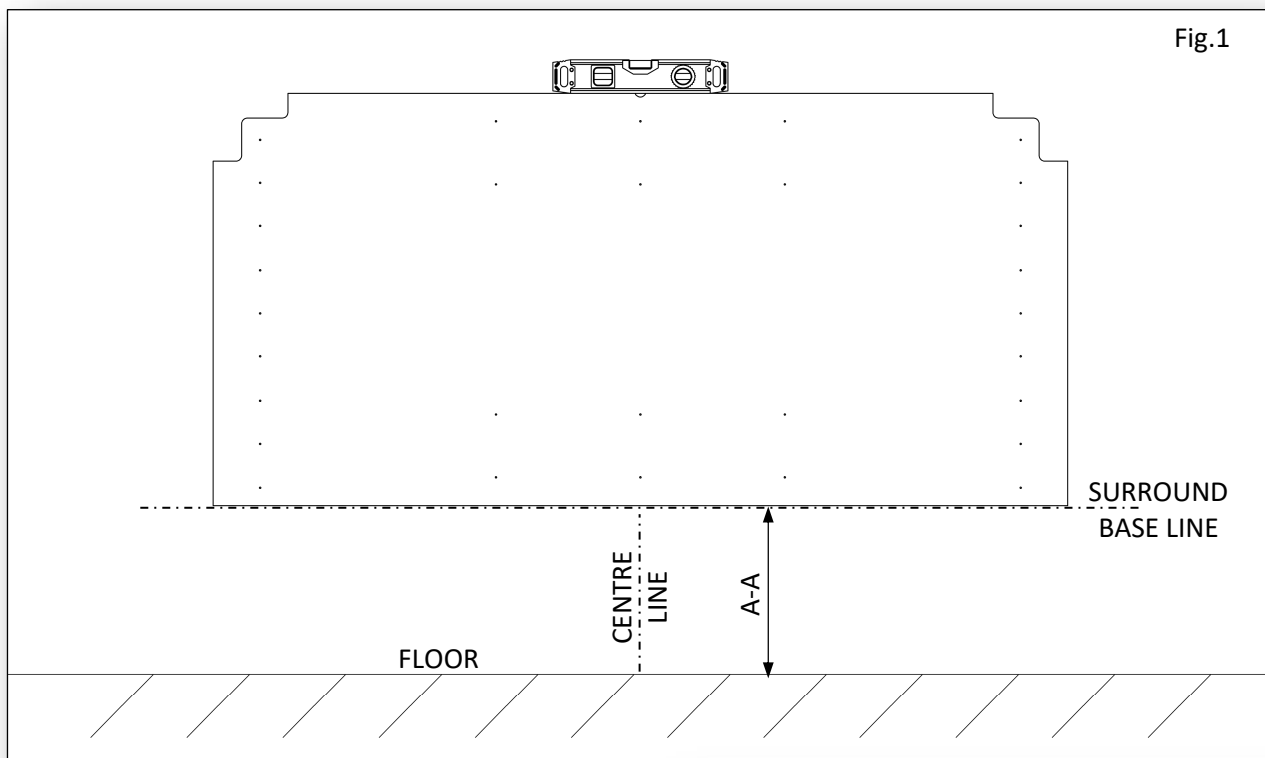


IMPORTANT: Before the Suite can be installed, consideration will need to be given to the routing the power supply to the Fire (K). This will affect the stages of the installation process. We advise a qualified electrician conduct any electrical parts of the installation.

1. Confirm the desired installation position of the Suite and lightly mark a vertical centre line on the wall. Determine the desired height for the Suite to be positioned off the floor and again lightly mark a Horizontal line (this line indicates the lowest point of the Suite). **See Fig.1.**

2. Unpack the Mount Board (L) and place centrally on the pre-marked horizontal line. To make the installation as flexible as possible, no pre-drilled fixing points have been provided. The installer can select the best fixing points for their wall. The Mount Board should be drilled and screwed to the wall using appropriate fixings (**see 'Important Note' on page 13**) a minimum of 6 screws should be used to mount the board.

See Fig.2 & 3.

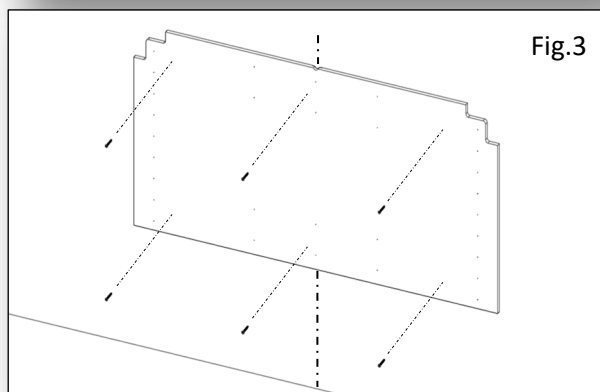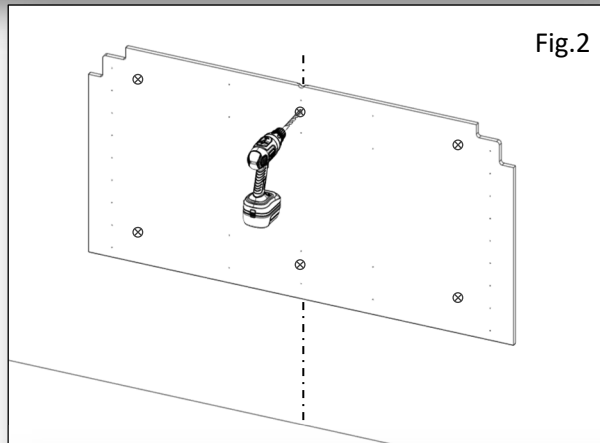

Mount Board Installation Continued...

5. Once the Mount Board (L) has been securely fixed in place, the left and right side Wall Hung Brackets (G) can be screwed in place using the pre-drill mounting holes. 18x 20mm Dome Head Screws (F) have been supplied to securely fix the Wall Hung Brackets (G) to the Mount Board (L). **See Fig.4 & 5.**

Note: The Hearth (B) is a two adult person lift.

Hearth Installation

6. Before installing the Hearth (B), it is important to route the fire power cable down the hearth side cut-out. The power cable will be packed with the Fire (K). **See Fig.7.**

IMPORTANT: If a power cable is to be routed to the rear of the Suite. Care must be taken not to crush or damage the cable when positioning the Suite.

7. Place the Hearth (B) centrally on to the Wall Hung Brackets (G) and with the power cable routed in place down the side notch, slide the Hearth (B) back in to position. **See Fig.6.**

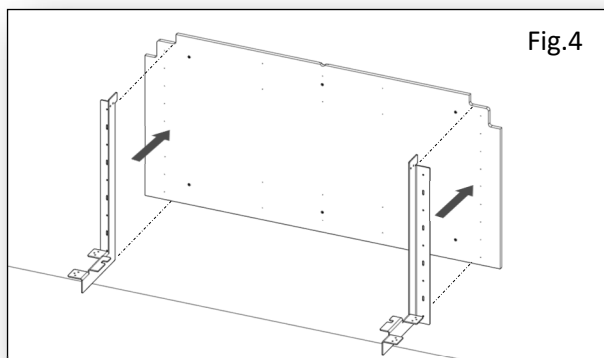


Fig.4

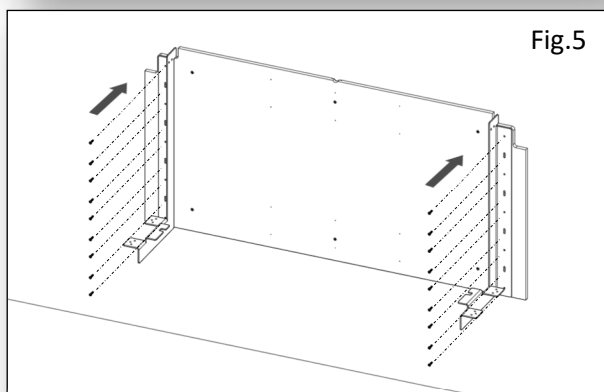


Fig.5

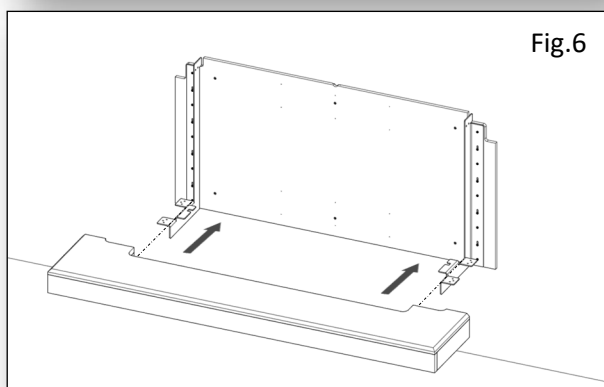


Fig.6

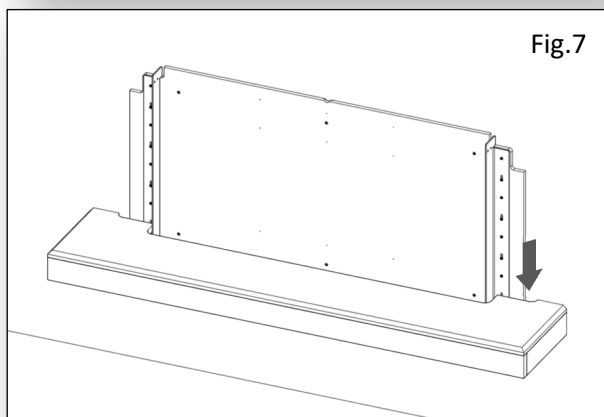




Fig.7

Hearth Installation Continued....

8. To secure the Hearth (B) in place, 4x 12mm Dome Head Screws (E) have been supplied.

Screw through the pre-drilled tabs on the Wall Hung Brackets (G) into the MDF support blocks pre-installed to the underside of the Hearth (B).

See Fig.8 & 9.

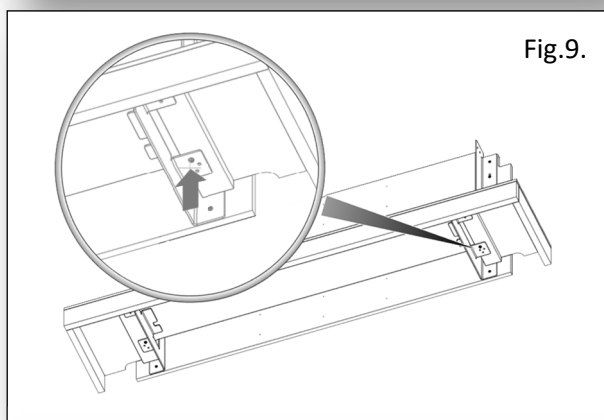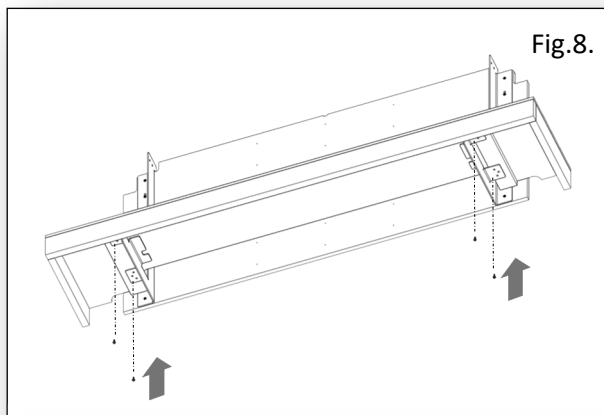


Main Body Wall Bracket Installation.

9. The Surround Main Body (A) is supplied on a transit board. To remove the transit board.


Unscrew and remove the wingnuts and washers. See Fig.10.

Note: The Main Body is a two adult person lift.

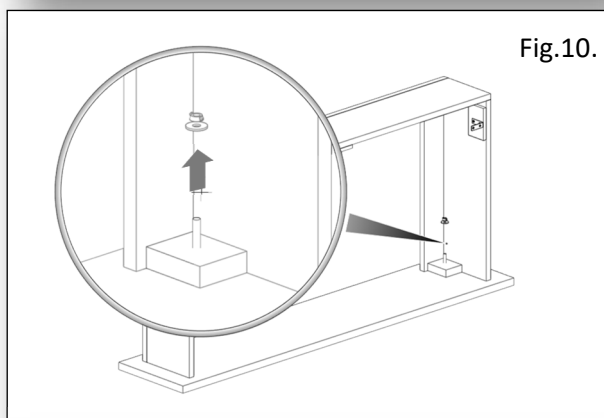


10. Lift the Main Body (A) off the transit boards fixing bolts. See Fig.11.

The transit board is no longer required.

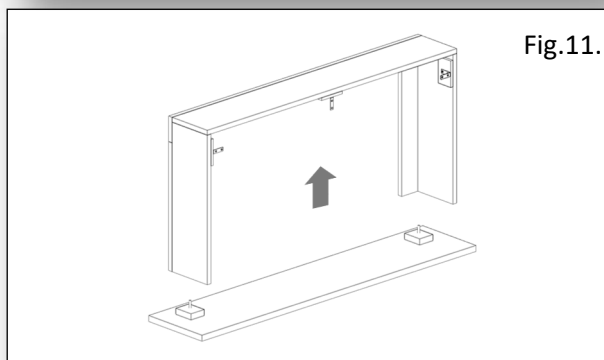


Main Body Wall Bracket Installation.


11. Lift the Main Body (A) in to position centrally on the pre-installed Hearth (B). **See Fig.12.**

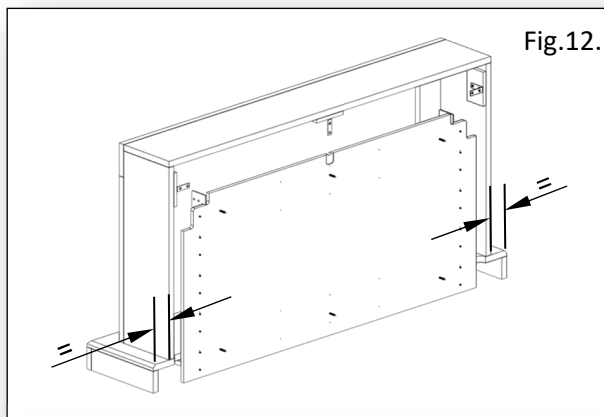

12. Position the 3x Wall Brackets (C) over the pre-installed L-brackets and mark the hole positions. The 2x Wall Brackets should be positioned 10mm in from the MDF side blocks on the Main Body (A) and the central top bracket positioned below the central L-bracket. **See Fig.13 & 14.**

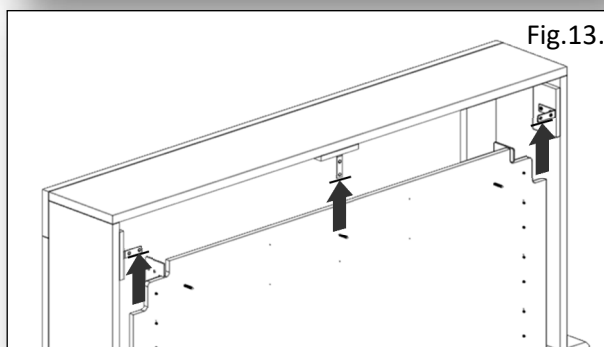


13. Remove the Main Body (A).

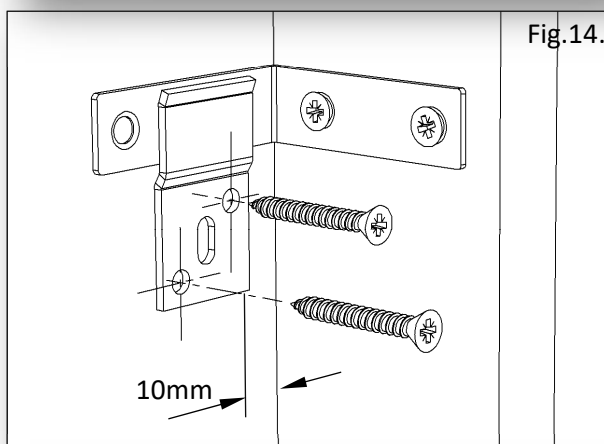


14. Drill & plug the wall using appropriate fixings. (see 'Important Note' on page 13).

Next securely fix the Wall Brackets (C) in place. **See Fig.14 & 15**

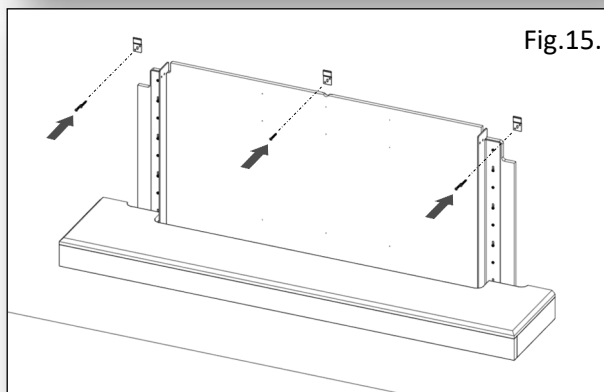


Preparing the Fire for Installation


15. Unpack the Fire (K)

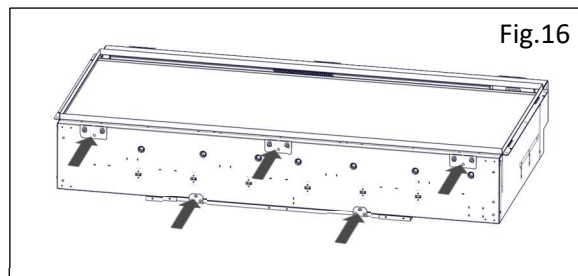


16. Lay the Fire (K) on its back and unscrew the 2x wall mount bracket securing screws on the rear base of the Fire. **Fig.16,17.**

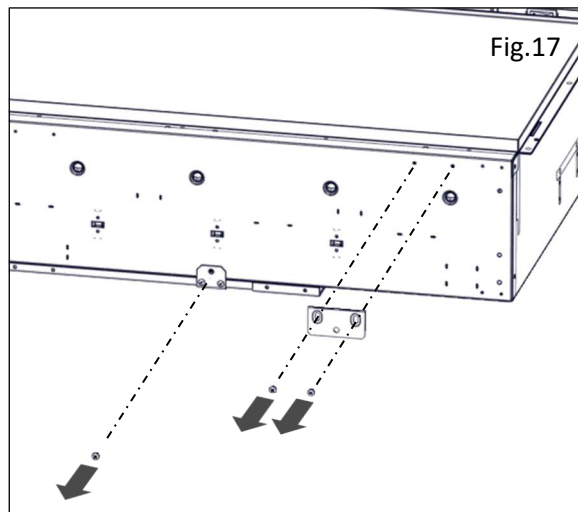

17. Position the Fire (K) back on to its base and angle the wall mount bracket away from the Fire at the base, then move the bracket down off the hook points. **Fig.18.**

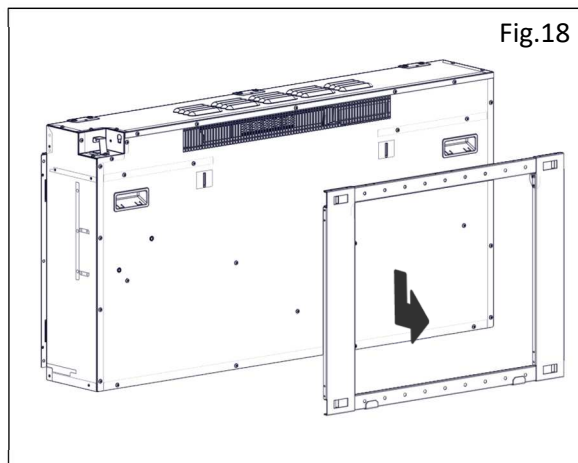


18. The Fire (K) is also supplied from the factory with 4x or 6x finger bend fixing brackets. Lay the fire on its back again. Each bracket is held in place with 2x screws. Remove all brackets. They are not required for this installation. **Fig. 16-19.**

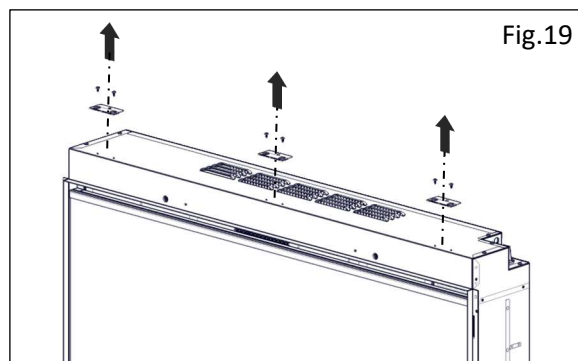

Installing the Fire


19. Screw the Fire wall mount bracket to the previously installed plywood Mount Board (L).

The Mount Board (L) is pre-drilled at the factory with two bracket mount positions. For this installation the **upper row** of fixing holes should be used. See Fig.20.

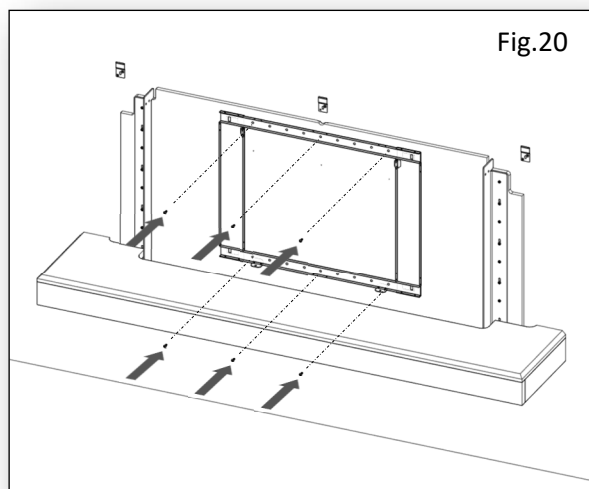


20. Lift the Fire (G) on to the mount bracket, lowering the fire down on to the bracket hooks. At this stage the power cable can be connected to the Fire (G) as specified in the fire instructions. See Fig.21.


Note: The Fire is a two adult person lift.

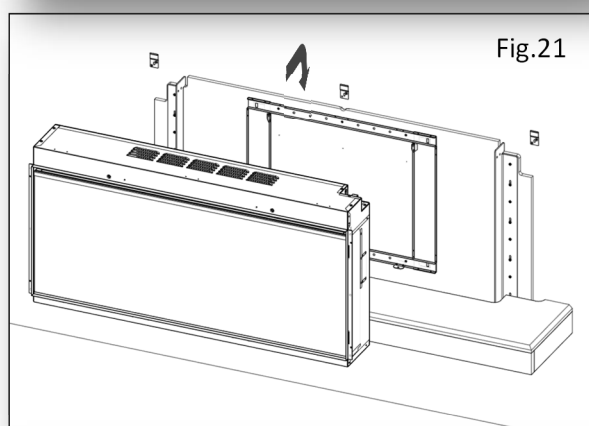

21. Due to a small variation in material thickness of the different Back Panel Trim (J) options. We have provided Adhesive Pads (H) to take up any gap between the Back Panel Trim (J) and the Surround Main Body (A).

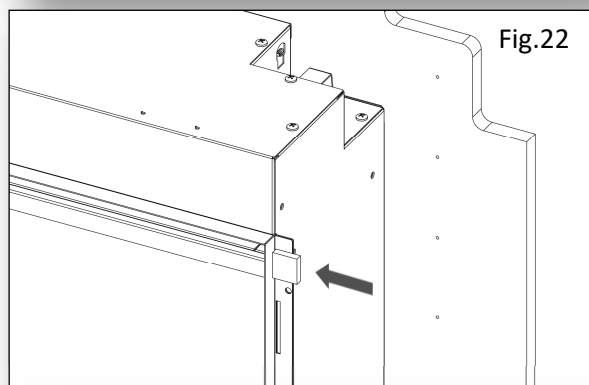

22. To fit the Adhesive Pads (H). Remove the backing and stick one Adhesive Pad (H) on each corner of the Fire (G) outer flanges. 4 in total. See Fig.22 & 23.

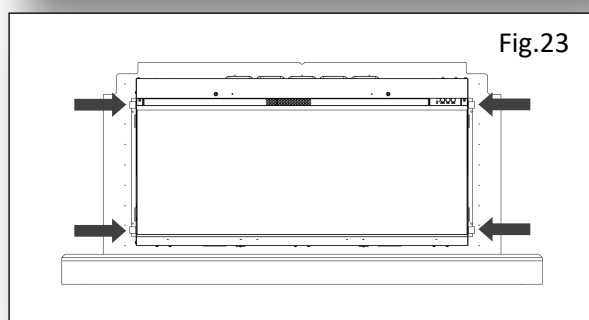

Installing the Mood Lighting

Note: If optional mood lighting has been purchased. This will require installing before proceeding any further.

23. Connect the mood lighting to the corresponding port on the fire and route the cable down the side of the Fire (K) to the underside of the Hearth (B). **See Fig.24.**

24. Peel the film off the adhesive tape on the rear of the mood lighting and adhere to the rear face of the Hearth (B). **See Fig.25 & 26.**

Tip: Clean the marble face before installation to achieve a good adhesion.

Fig.24

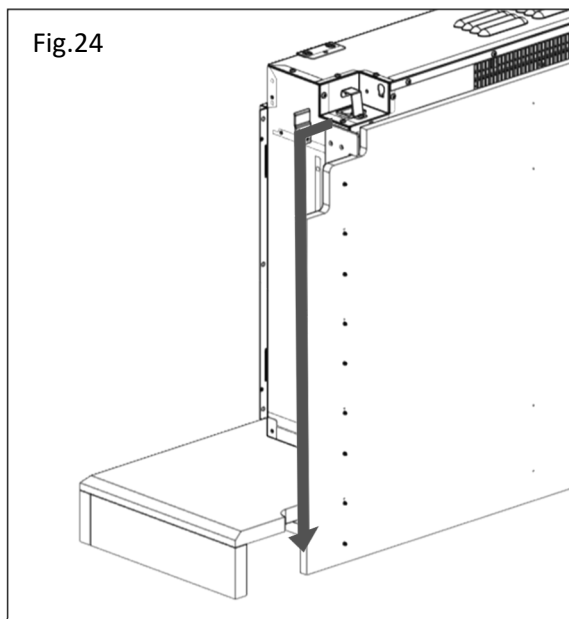


Fig.25


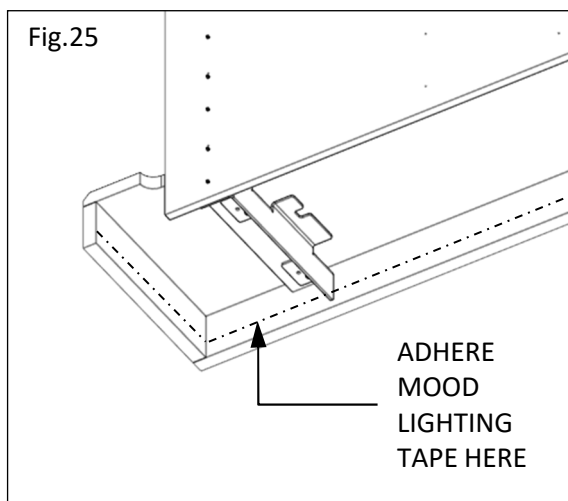


Fig.26

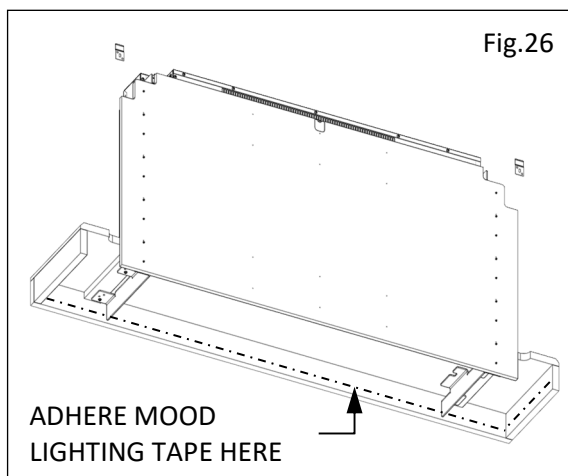

Installing the Back Panel Trim

25. Unpack the Back Panel Trim (J) and if applicable please remove the protective film.

See Fig.27.

Note: The Back Panel Trim (J) is supplied with 3 x fire support stands, these are not required for this installation.

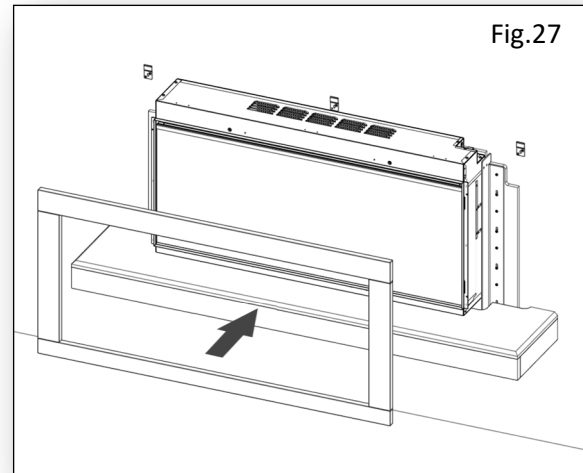


Fig.27

26. Place the Back Panel Trim (J) over the Fire (K) outer flanges.

See Fig.28.

Note: Take care not to let the Back Panel Trim (J) fall forward onto the floor, as this may damaged to the part.

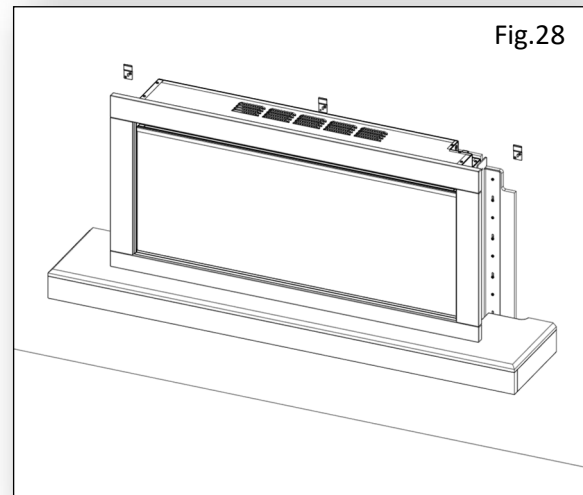


Fig.28

Installing the Surround Main Body

27. To fit the Main Body (A) in place.
Lift the Main Body (A) and position the pre-installed L-brackets over the pre-installed Wall Brackets (C) and lower onto the hearth.
Fig.29 &30.

The pre installed Main Body L-brackets and the Wall Brackets (C) should engage as shown in **Fig.31.**

Once installed confirm the Main Body (A) is securely held in place.





Note: The Main Body is a two adult person lift.

28. The surround installation is now complete.
See Fig.32.

For information on how to dress the fuel bed and position the logs, please scan the QR code detailed on Page 13 or follow the link to our website.

For fire operating instructions please scan the QR code detailed on Page 13 or follow the link to our website.

Note: Should a defect be discovered and in the event of a Surround being permanently fixed to the wall the householder will be responsible for any costs incurred.

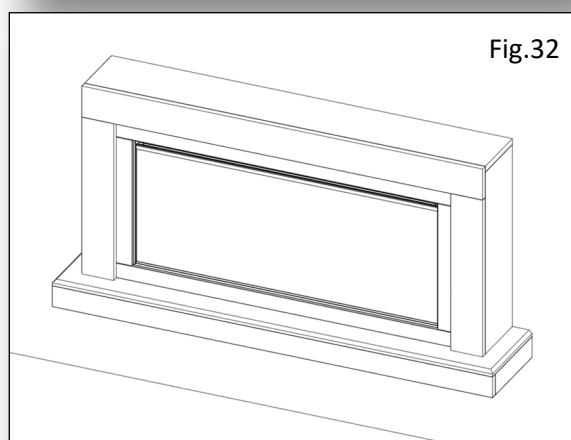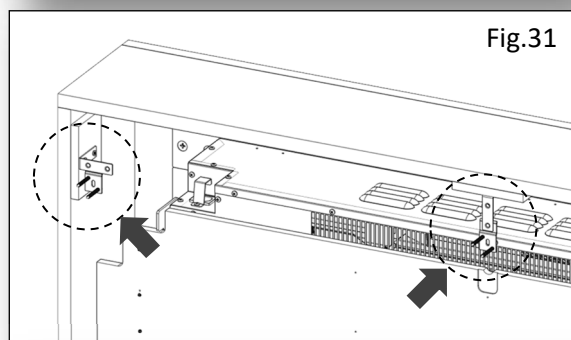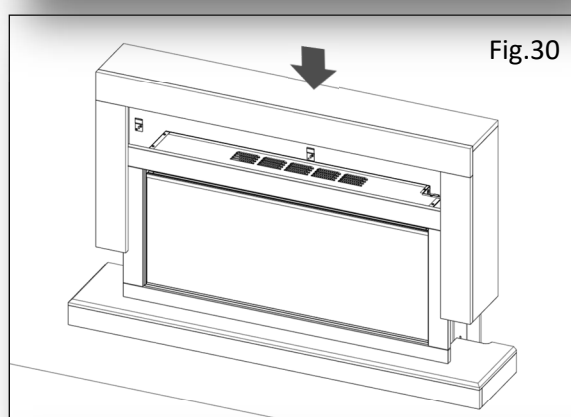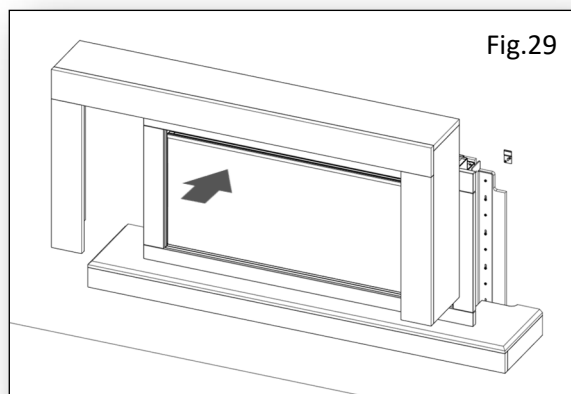

Maintenance

WARNING: Before any maintenance or whilst cleaning the exterior of the fireplace, the unit should be disconnected from the power supply until it has cooled down.

Cleaning the Fire

Cleaning or polishing products are not recommended. Fingerprints or other marks on the front glass panel can be removed by a piece of soft, damp, lint-free cloth with a good quality household glass cleaner. The front glass panel should always be completely dried with a clean, lint-free cloth or paper towel. To maintain the appearance of your new suite we recommend that it is dusted using a lint free cloth. **NEVER** use any form of abrasive or **DAMP** cloth.

CAUTION: Abrasive cleaners should not be used on the glass panel. Liquids should not be sprayed directly onto any surface of the unit.

Troubleshooting

Should you have any queries regarding this product please contact Customer Services on 0191 4300901 (option 4) or email us at customerservices@bemodern.co.uk

Recycling

All cardboard packing is recyclable

iQFX

Scan here for detailed installation and user instructions and guidance videos or download from
<https://www.bemodern.com/diamondfireplaces/support/downloads/>



IMPORTANT NOTE:

Wall fixings (i.e. screws/wall plugs etc.) are not supplied as these are crucially dependent upon the type of wall and surface the Suite is going to be fixed too.

The installer is therefore responsible for ensuring that suitable fittings are used as well as individual fitting situations and environments. All mechanical fixings, for holding the Suite in position, must be secured to a solid wall or structure.

Where appropriate please recycle packaging responsibly.
