



FIREPLACES & STOVES | BATHROOM FURNITURE

Flat Pack Suites
Instructions For Assembly & Installation

(Surround & Fire Supplied Separately)

Models Covered:

38" Flat Pack Surround
52" Flat Pack Surround

Floor Standing Flat Pack Suite











Including

Surround & Fire

	Page
Parts, Fittings Supplied & Important Note	2-4
Surround Assembly	5-8
Surround Installation	9
Fire Installation	10-11
Maintenance / Important Note	12


Parts & Fittings Supplied.

Note: part quantities depend on the model purchased

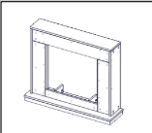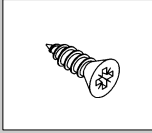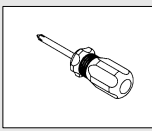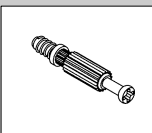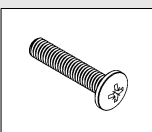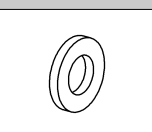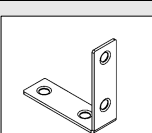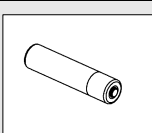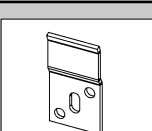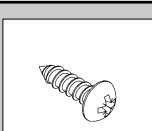REF	PARTS	DIAGRAM	QTY	REF	PARTS	DIAGRAM	QTY
A BOX-1	Surround Components		1	H BOX-1	16mm Screws		4
B BOX-1	Cams		30 / 34- 52" ONLY	I BOX-1	Screw Driver		1
C BOX-1	Cam Pins		30 / 34- 52" ONLY				
D BOX-1	M6 Screws		10	K BOX-2	Fire		1
E BOX-1	M6 Washer		10	L BOX-2	Fire Remote Control		1
F BOX-1	Wall Bracket		2	M BOX-2	AAA Batteries		2
G BOX-1	Wall Hook		2	N BOX-2	16mm Dome Head Screws		4

Surround Component Panels.

Note: part quantities depend on the model purchased.

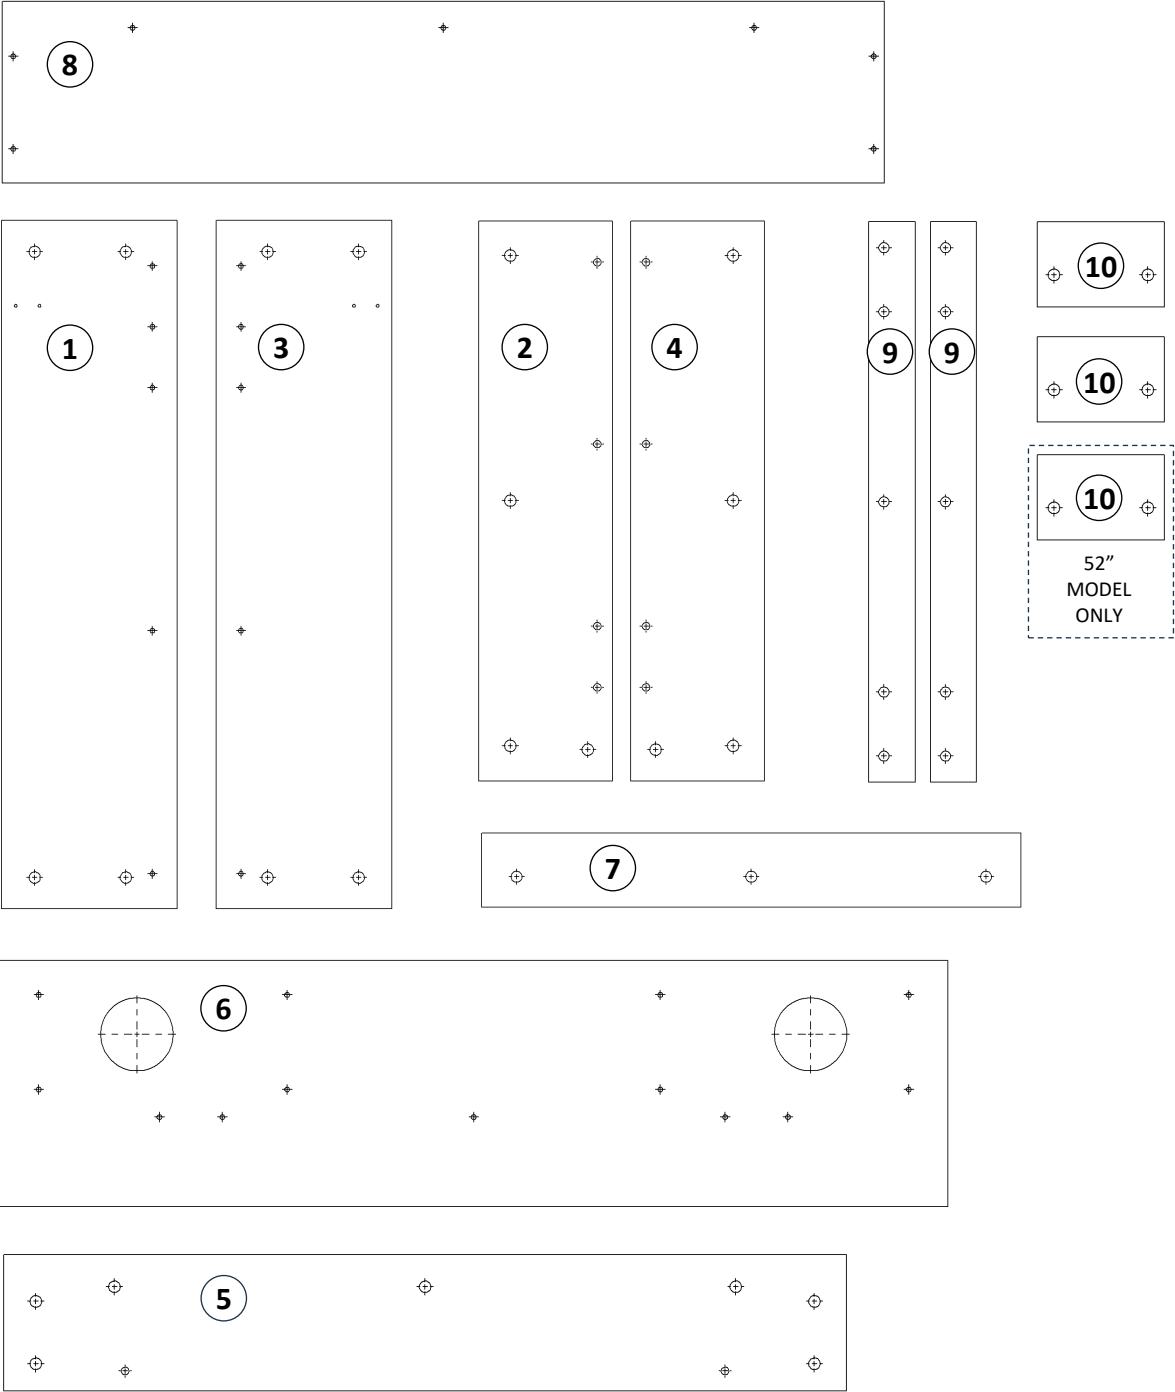

Before you start

DO NOT dispose of the packaging until you have checked and made sure you have all the parts and fittings listed above. If not, contact: **BE MODERN - HELPLINE 0191 430 0901** who will be able to assist you with this and any other problems you may encounter.

When you are ready to start, make sure that you have the right tools to hand, plenty of space and a clean dry working area.

NOTE: Protect the surface you are working on to prevent any possible damage to the fire surround or floor.

Fire Instructions

For fire operating instructions please refer to the separate instructions supplied with the fire.

Care

To maintain the appearance of your new suite we recommend that it is dusted using a lint free cloth. **NEVER** use any form of abrasive or **DAMP** cloth.

IMPORTANT NOTE:


Wall fixings (i.e. screws/wall plugs etc.) are not supplied as these are crucially dependent upon the type of wall and surface the Suite is going to be fixed too.

The installer is therefore responsible for ensuring that suitable fittings are used as well as individual fitting situations and environments. All mechanical fixings, for holding the Suite in position, must be secured to a solid wall or structure.


Surround Assembly

Screw 5x cam pins in to the Ø5mm fixing holes in panel-1.

Note: instruction Diagrams show 38" model.

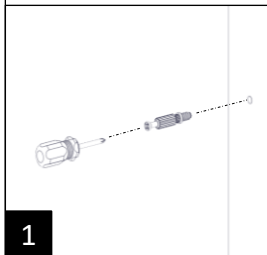


1

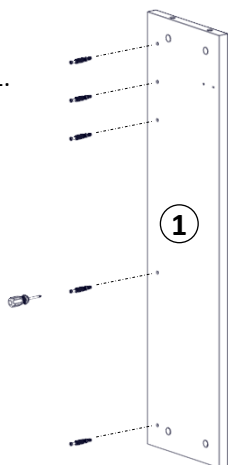

1

Position panel-2 over the cam pins & slide the panels together.

2

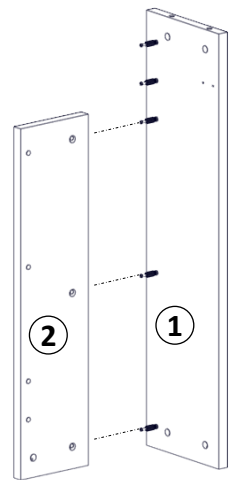


2

1


Place 3x cams in the cam holes, over the pin heads & rotate the cams to secure. Locking the panels together.

3

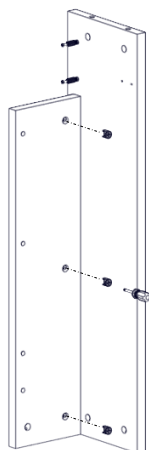

Repeat the steps used for panels-1&2 for the opposite side panels-3&4.

4

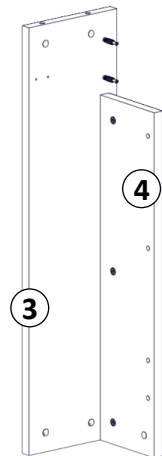


3

4

Line the pre-assembled panels-1&2 up with panel-5 and slide together over the cam pins. Repeat the process for panels-3&4.


5

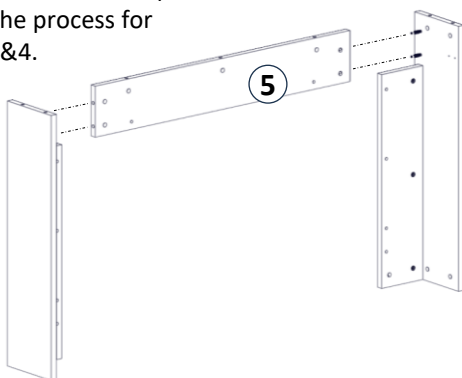


5

Place 4x cams in the cam holes over the pin heads & rotate the cams to secure. Locking the panels together.

6

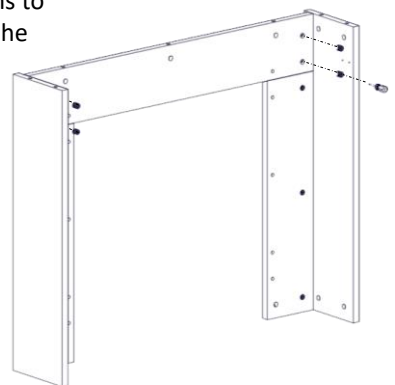


Screw the 9x or 10x cam pins in to the indicated hole in panel part-6

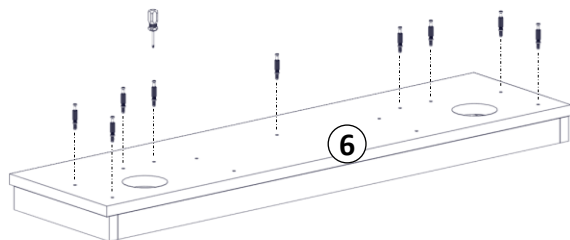


7

Place panel-7 over the indicated cam pins and lower in to place.

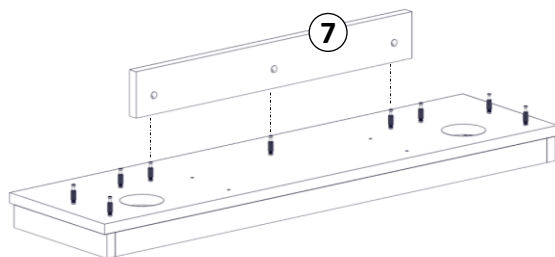


8

Place 3x or 4x cams in the cam holes over the pin heads & rotate the cam to secure in place.

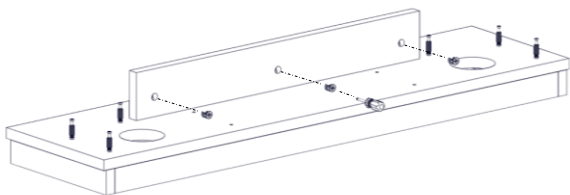


9

Lift the assembled body on to the prepared hearth. Carefully lowering the body on to cam pins.

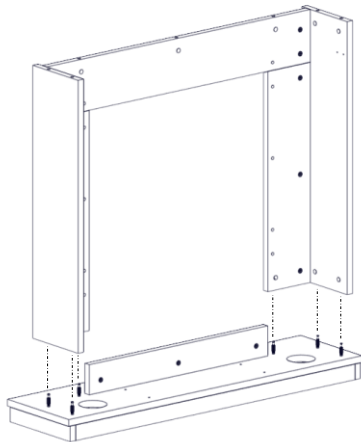


10

Place 6x cams in the cam holes on the left & right sides. Rotating cams to secure in place.

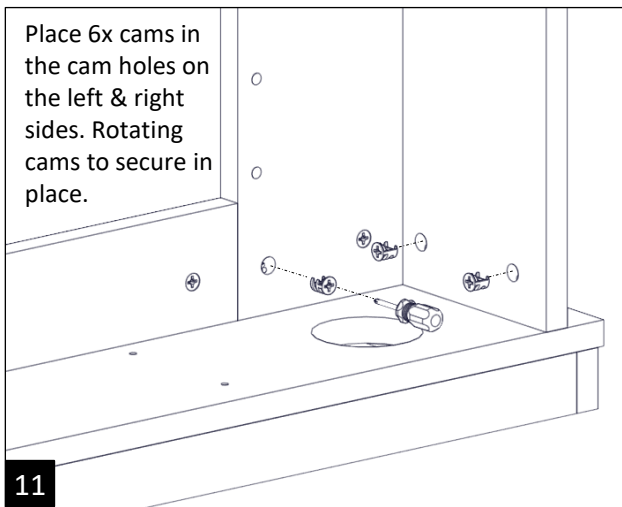


11

Main body securely fitted to the hearth

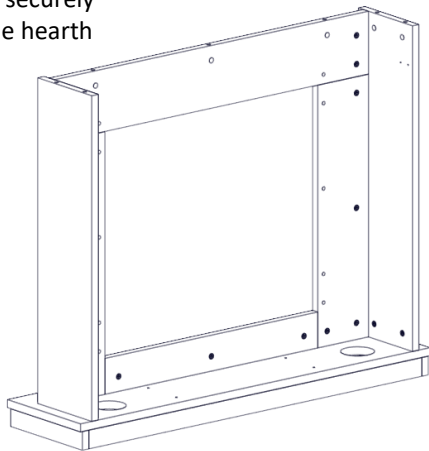


12

Screw the 7x or 8x cam pins in to the indicated holes in panel-8

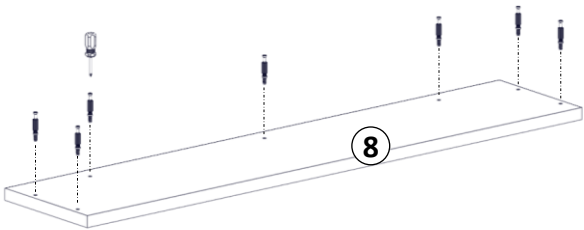


13

Place panel-8 on the main body, carefully lining up the cam pins and lower panel-8 in to place.

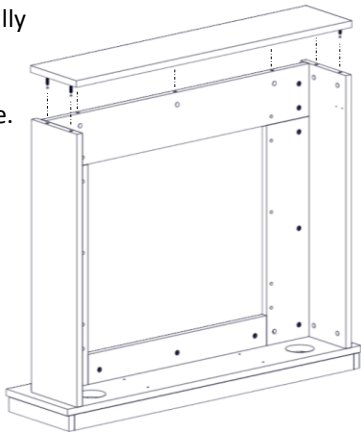


14

Place the 7x cams in the cam holes over the pin heads & rotate the cams to secure in place. See Diagram 15 & 16.

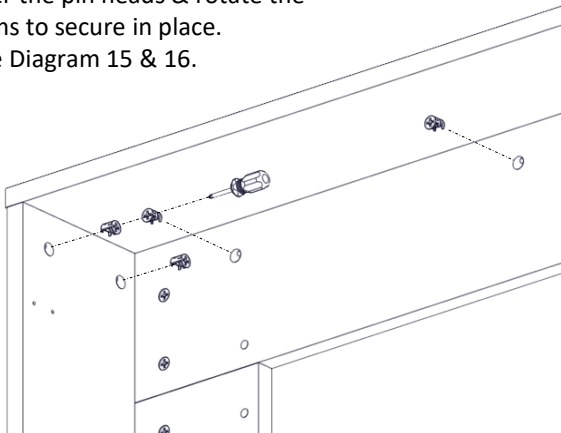


15

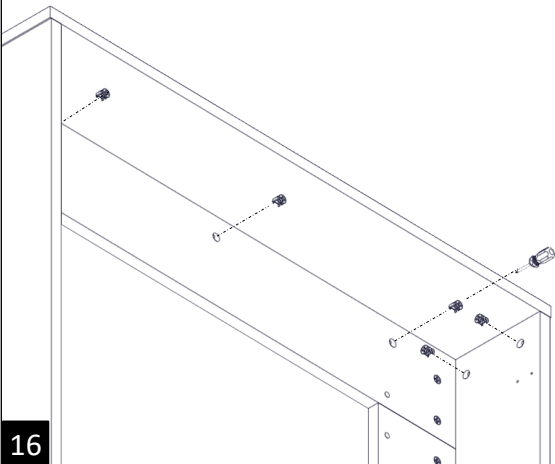


16

Securely screw the 2x number 9 panels in place with the supplied M6 washers and screws.




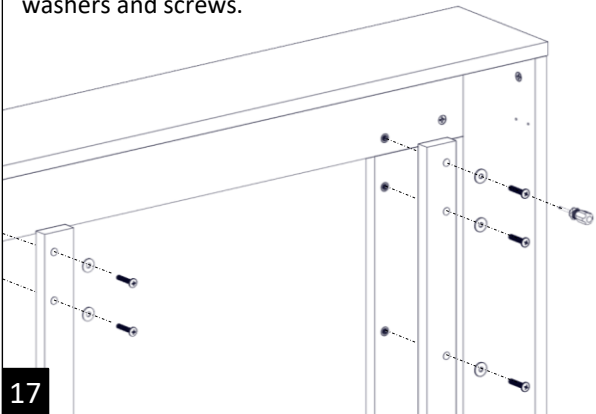


17

10x M6 washers & screws required.

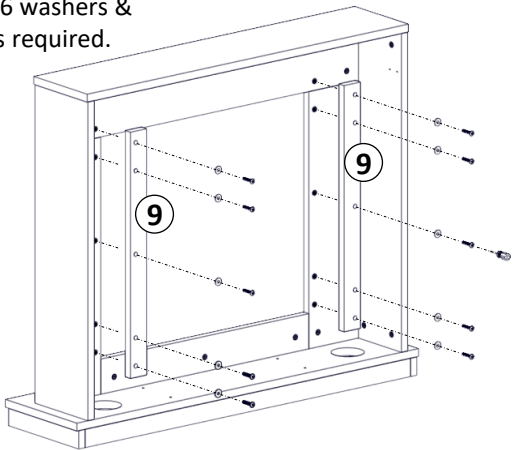


18

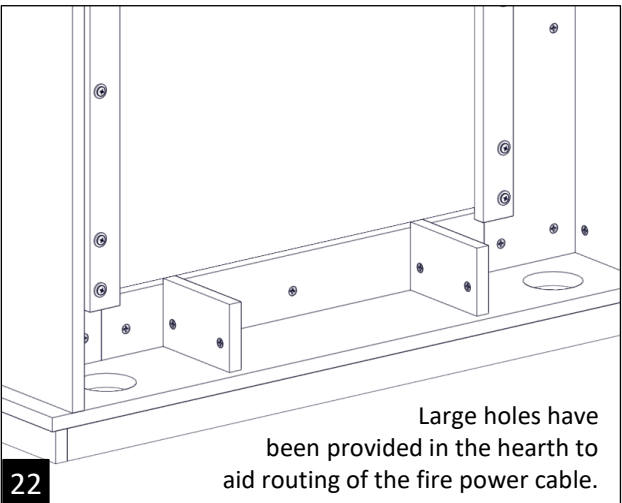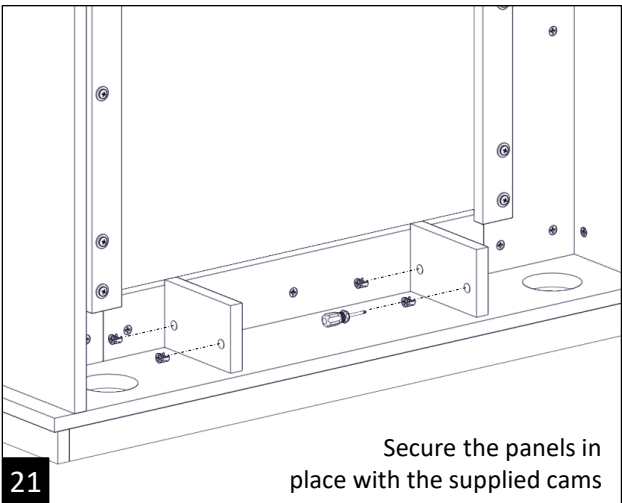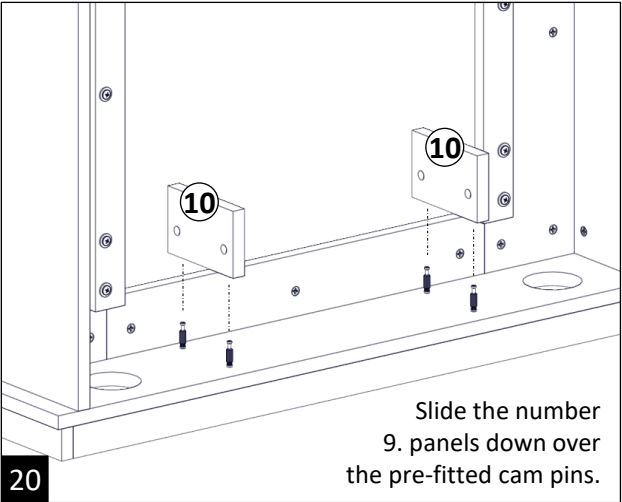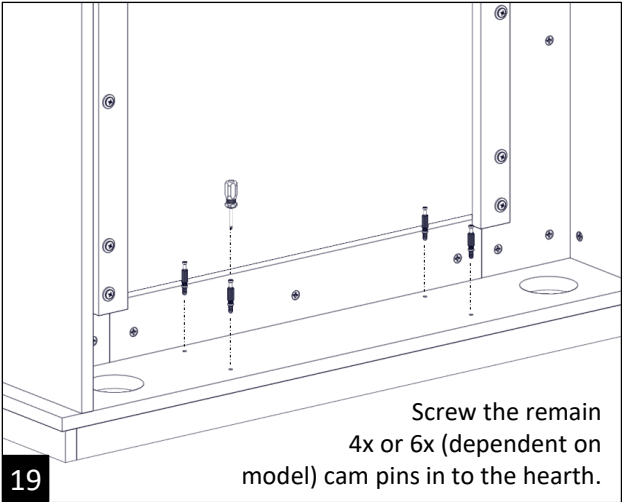


Surround Installation


Screw the 2x wall brackets to the inside of the surround legs using the 4x 16mm screws. Pilot holes provided.

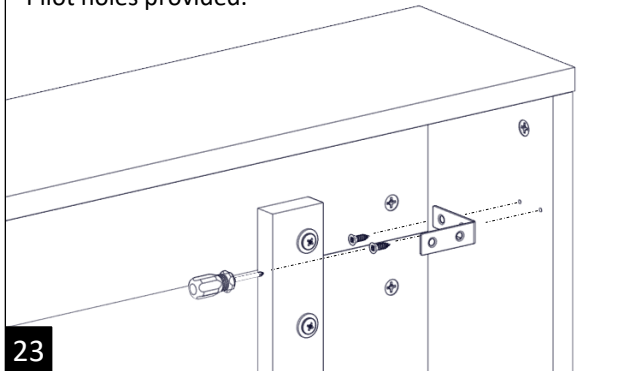


The wall brackets should be screwed to the inner legs 100mm from the top.

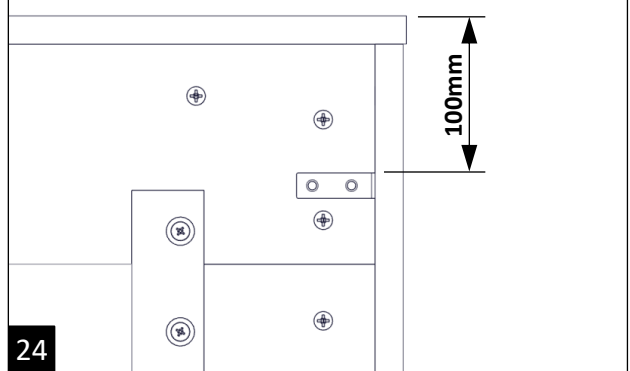

Wall brackets are fitted to each side.

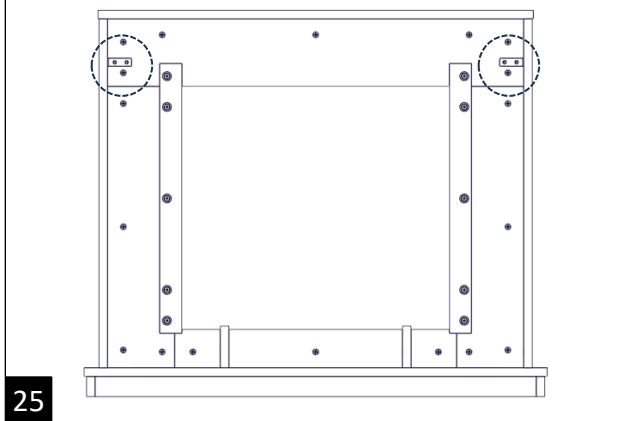


With a second person trial fit the surround in the finished position.

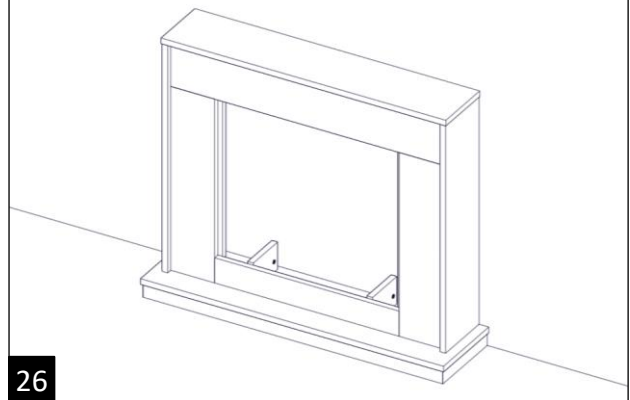


Reach through the opening in the surround and position the wall hooks 10mm off the surround inner legs as detailed. Mark the hole centre, drilling positions for both sides.

Remove the surround and fix the wall brackets in place using the appropriate wall fixing, dependent on the wall material.

See **Important Note** on page 4.

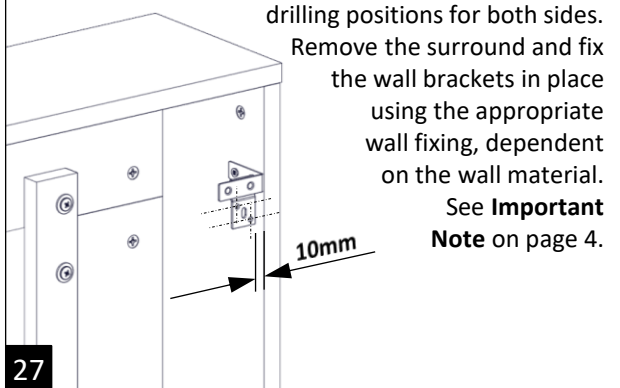


With a second person lift the surround into the finished position and confirm it is secure on the wall brackets. **Note:** the surround can be fitted in place with or without the fire installed. This will depend on the required power cable routing.

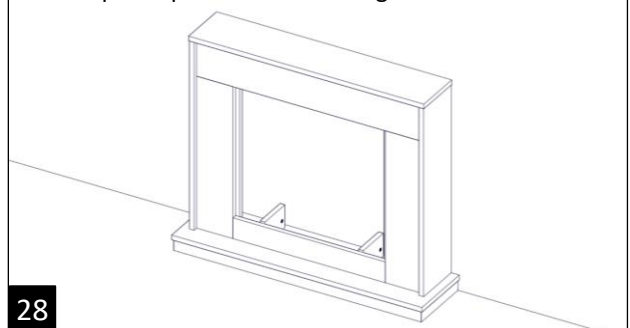


Fire Installation

Before installing the fire the front trim must be removed. The trim is held in place with magnets.

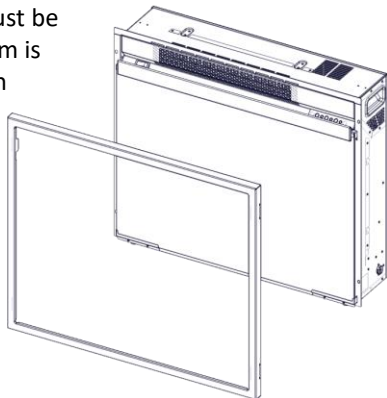


29

Route the fire's power cable to the rear of the surround and lift the fire with a second person at an angle to the surround.

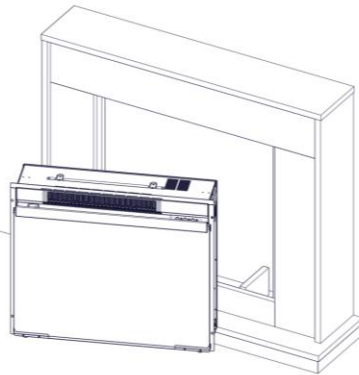


30

Place the fire in the surround at an angle to clear the fire's power cable.

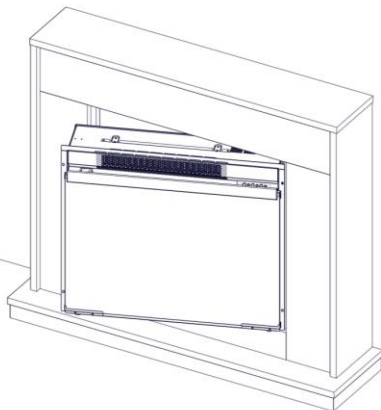


31

Place the fire centrally in the surround. Mark the fixing points. Pilot drill the fixing points and screw the fire securely in place with 4x 16mm Dome Head screws.

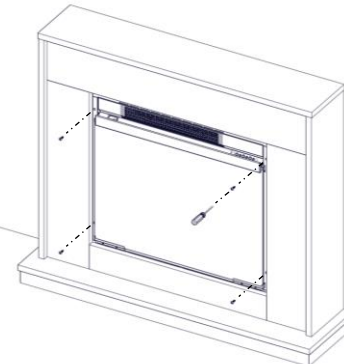


32

Fire fixing positions.

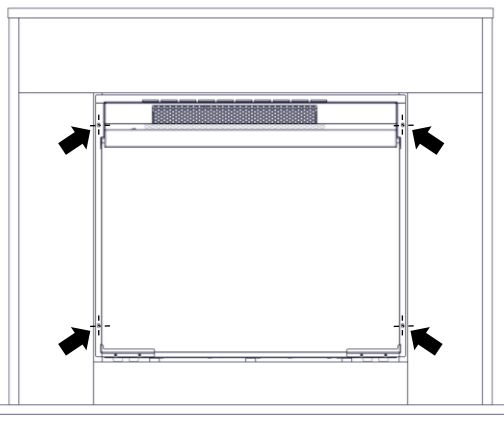

33


Confirm the trim magnets are correctly positioned on the magnet tabs. Trims have different magnets quantities depending on the trim size.

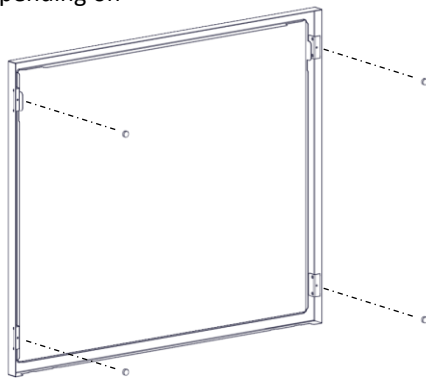

34


Detail view showing magnet correctly position on the trim magnet tab.

35

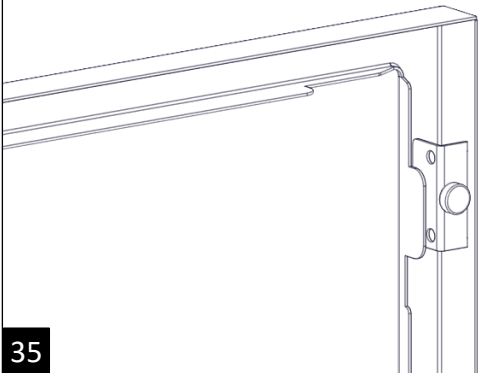


Refit the trim on the fire.

36

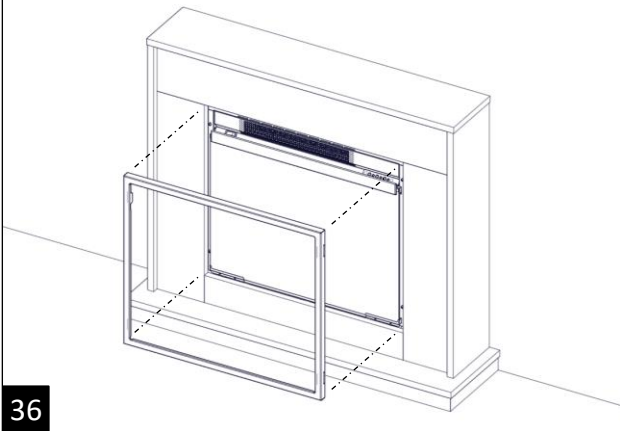


The installation is now complete

37

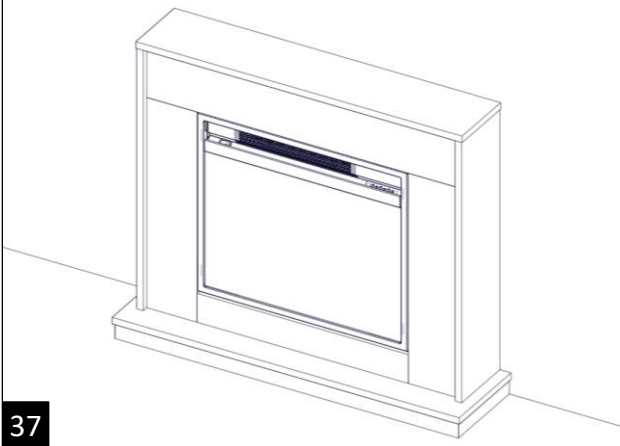

38

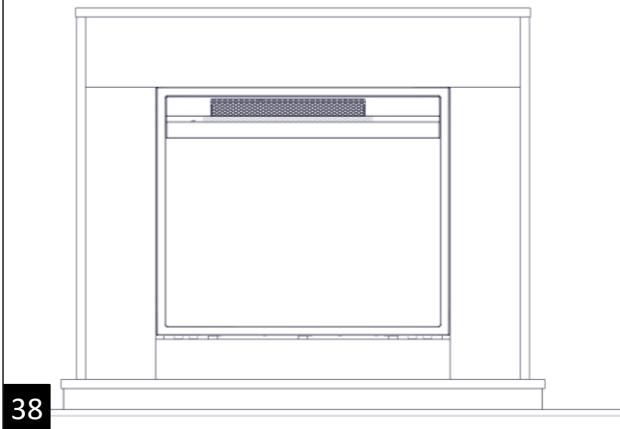

Maintenance

WARNING: Before any maintenance or whilst cleaning the exterior of the fireplace, the unit should be disconnected from the power supply and allowed to cool down.

Cleaning the Fire

Cleaning or polishing products are not recommended. Fingerprints or other marks on the front glass panel can be removed by a piece of soft, damp, lint-free cloth with a good quality household glass cleaner. The front glass panel should always be completely dried with a clean, lint-free cloth or paper towel.

CAUTION: Abrasive cleaners should not be used on the glass panel. Liquids should not be sprayed directly onto any surface of the unit.

Troubleshooting

Should you have any queries regarding this product please contact Customer Services on 0191 4300901 (option 4) or email us at customerservices@bemodern.co.uk

Recycling

All cardboard packing is recyclable

IMPORTANT NOTE:

Wall fixings (i.e. screws/wall plugs etc.) are not supplied as these are crucially dependent upon the type of wall and surface the Suite is going to be fixed too.

The installer is therefore responsible for ensuring that suitable fittings are used as well as individual fitting situations and environments. All mechanical fixings, for holding the Suite in position, must be secured to a solid wall or structure.

Where appropriate please recycle packaging responsibly.
