

bemodern®

FIREPLACES & STOVES | BATHROOM FURNITURE

DIAMOND

Luxury Fireplaces

Wall Mounted Timber Suite Instruction For Assembly & Installation

(Surround & IQFX Fire Supplied Separately)

Models Covered:

4459





Wall Mounted Timber Suite

Including

**IQFX – 750L Electric Fire
(Instruction Number 200888)**

	Page
<u>Parts, Fittings Supplied & Important Note</u>	2
<u>Preparing for Surround Installation</u>	3-4
<u>Fire Installation</u>	4-7
<u>Suite Installation</u>	7-8
<u>Maintenance / Important Note</u>	9

Parts & Fittings Supplied.

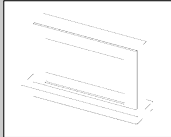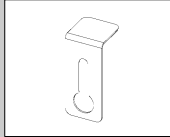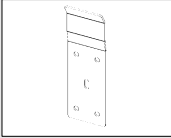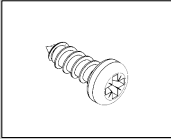REF	PARTS	DIAGRAM	QTY	REF	PARTS	DIAGRAM	QTY
A BOX-1	Surround		1	D BOX-1	Support Bracket Supplied with surround.		1
B BOX-1	Wall Bracket Supplied with surround.		2	E BOX-2	Fire Supplied Separately.		1
C BOX-1	3.5mm x 12mm Round Head POZI Screws Supplied with surround.		4				

Before you start

DO NOT dispose of the packaging until you have checked and made sure you have all the parts and fittings listed above. If not, contact: **BE MODERN - HELPLINE 0191 430 0901** who will be able to assist you with this and any other problems you may encounter. When you are ready to start, make sure that you have the right tools to hand, plenty of space and a clean dry working area.

NOTE: Protect the surface you are working on to prevent any possible damage to the fire surround or floor.

Fire Instructions

For fire operating instructions please refer to the separate instructions supplied with the fire.

Care

To maintain the appearance of your new suite we recommend that it is dusted using a lint free cloth. **NEVER** use any form of abrasive or **DAMP** cloth.

Tools Required (not supplied)


•Pencil •Screw Driver •Ruler •Tape Measure •Drill

IMPORTANT NOTE:

Wall fixings (i.e. screws/wall plugs etc.) are not supplied as these are crucially dependent upon the type of wall and surface the Suite is going to be fixed too. The installer is therefore responsible for ensuring that suitable fittings are used as well as individual fitting situations and environments. All mechanical fixings, for holding the Suite in position, must be secured to a solid wall or structure.


Preparing for Surround Installation

Unpack the surround and prepare the area for the installation.

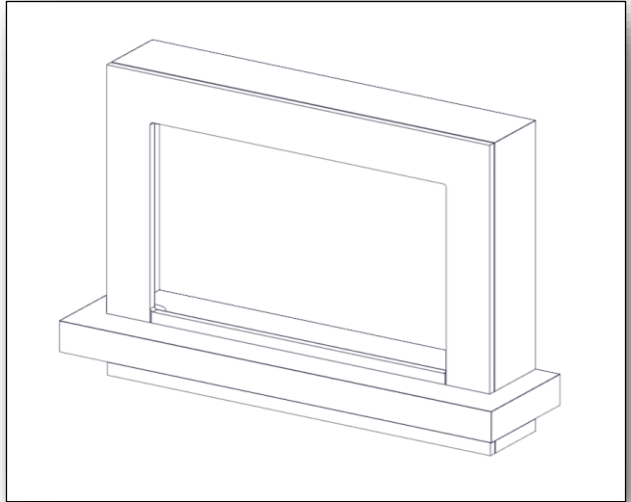

Measure from the base of the surround up to the bottom edge of the pre-installed wall bracket to get dimension A-A.


Measure from the inside edge of the righthand wall bracket to the inside edge of the lefthand wall bracket. Divide the dimension by 2 then minus 3mm from the dimension for tolerance, to get dimension B-B.

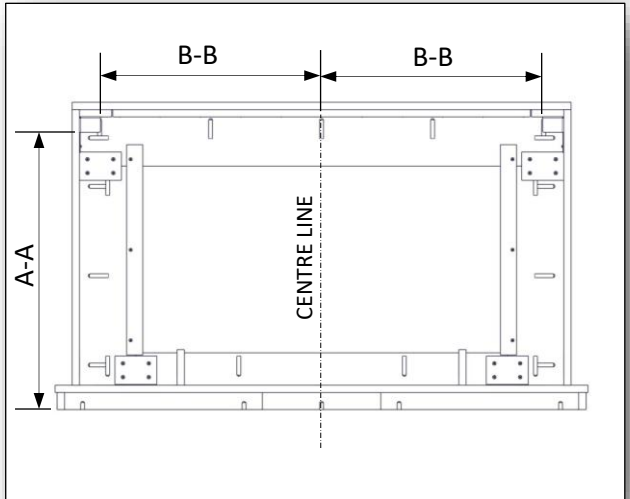

For **wall mounted surrounds** decided a distance from the floor to the bottom of the surround, dimension C-C.

Mark a centre line starting at dimension C-C from the floor level, at a distance of A-A.


Measure out from the centre line and mark the position of the wall brackets B-B, supplied with surround.

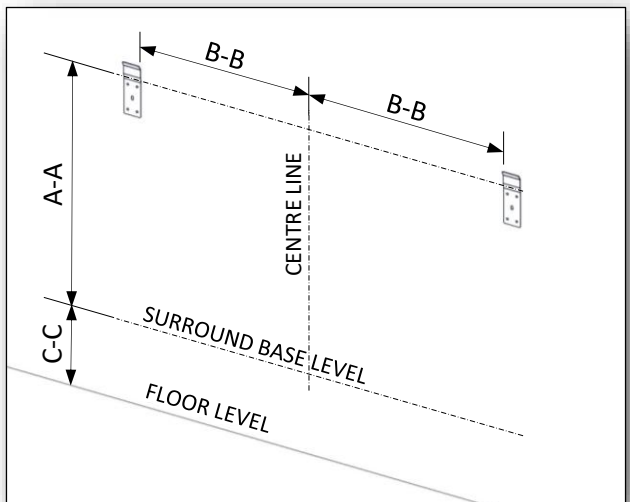


Holding the wall hook brackets in place mark the position of the fixing holes on the wall. The wall hook brackets must be level and horizontal with each other.

Drill and plug the 8 fixing points in the wall with the appropriate fixing for the wall medium.

See **IMPORTANT NOTE** on page 2 for wall fixing information.

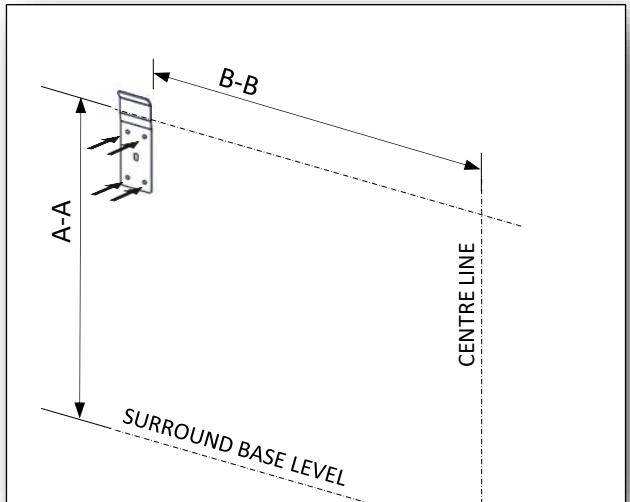


Using the 4 pre-drilled screw holes. Securely fix both wall hook brackets in place.

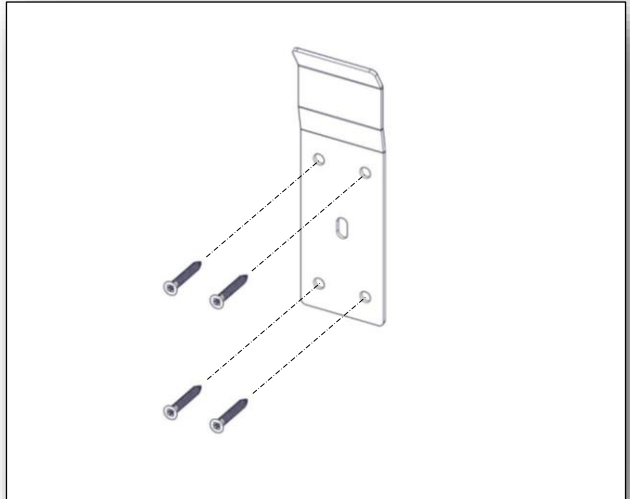


Fire Installation


With a second person to help. Lift the fire on to its back and remove the base mount brackets. These are not required for this installation.

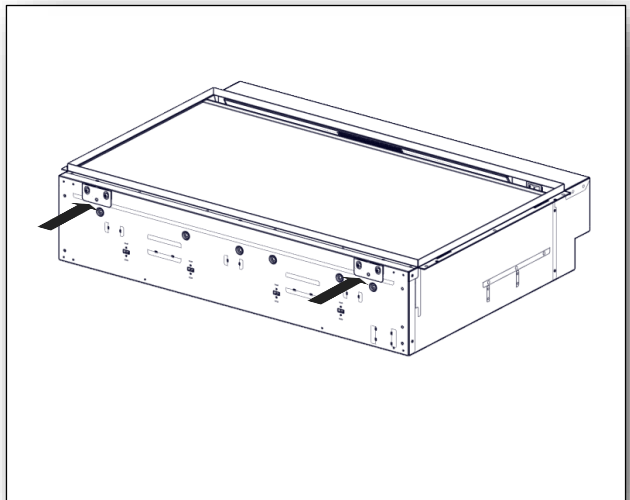


Remove the base mount bracket.

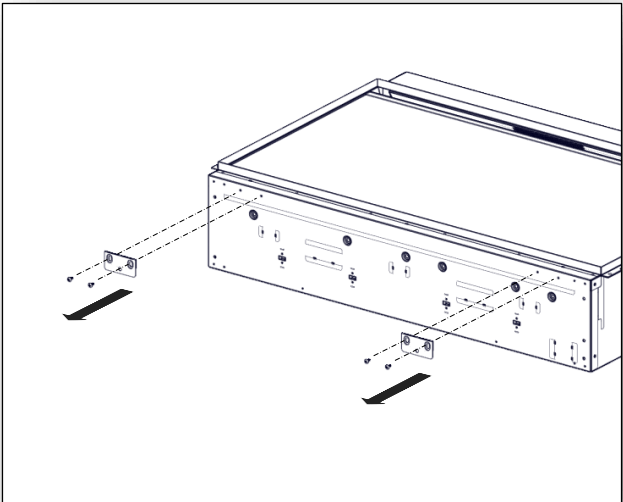

Install the IEC power cable and secure in place with the screwed locking bracket.

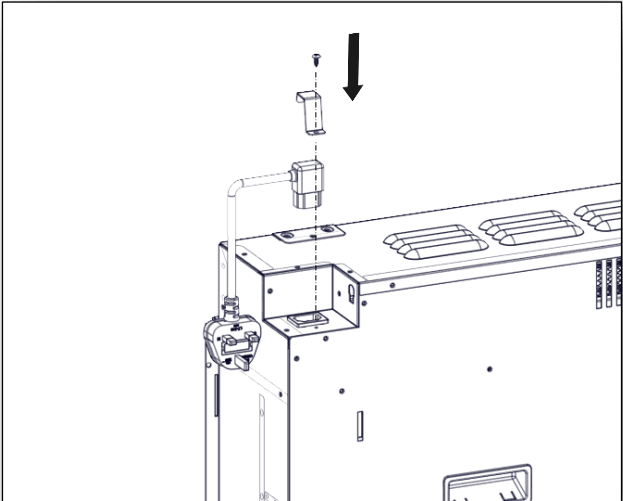


IEC power cable shown secured in place.

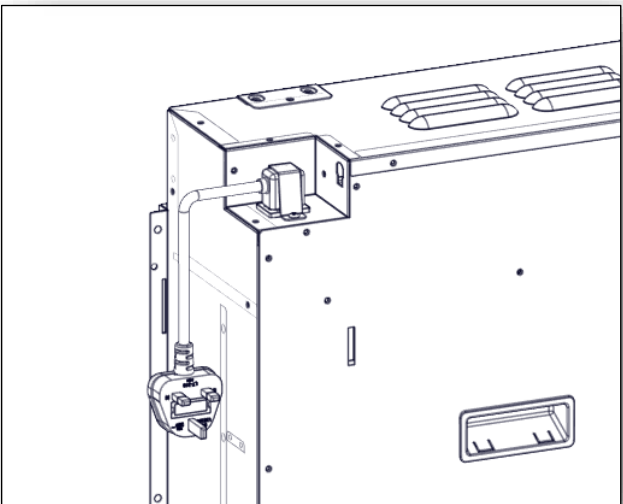


Position the fire upright and back off the central rear body screw a couple of millimeters.

Note: Do not fully remove.


Place the support bracket keyhole opening over the screw and slide down.

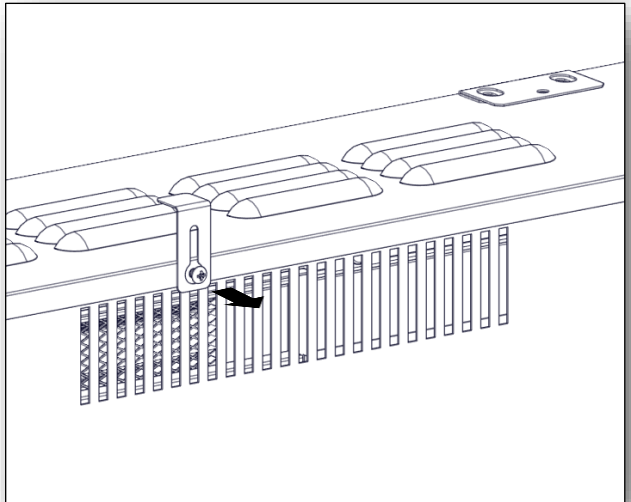


Slide the support bracket down over screw head.
Leave loose until the fire is fitted into the surround.

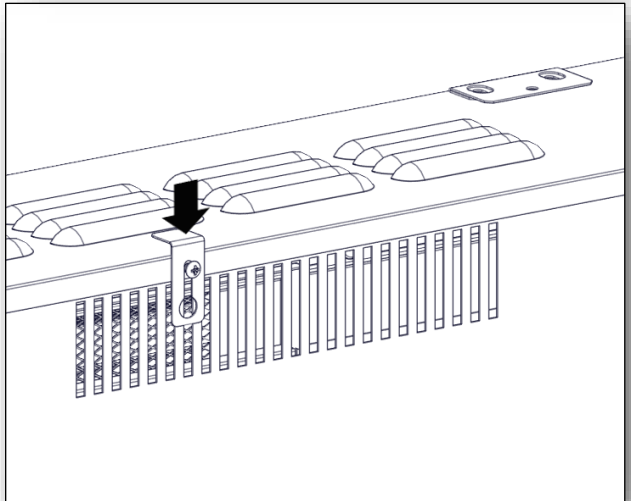

Position the prepared fire centrally in the surround and secure in place with the supplied 4 X 3.5mm x 12mm Round Head POZI Screws.

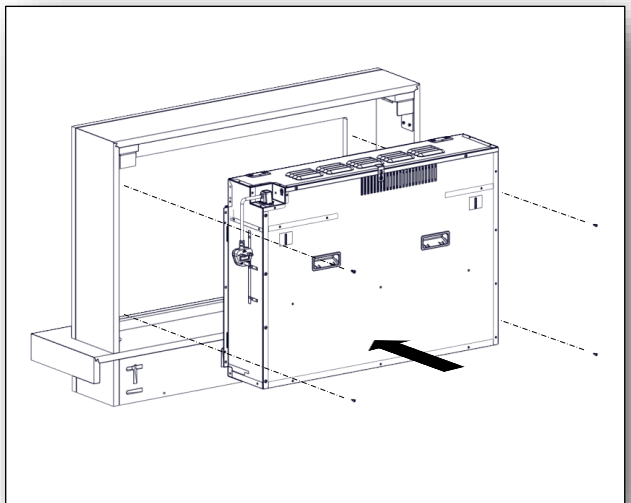


Slide the support bracket up so that it touches the surround top panel. Tighten the screw securing the bracket in position.

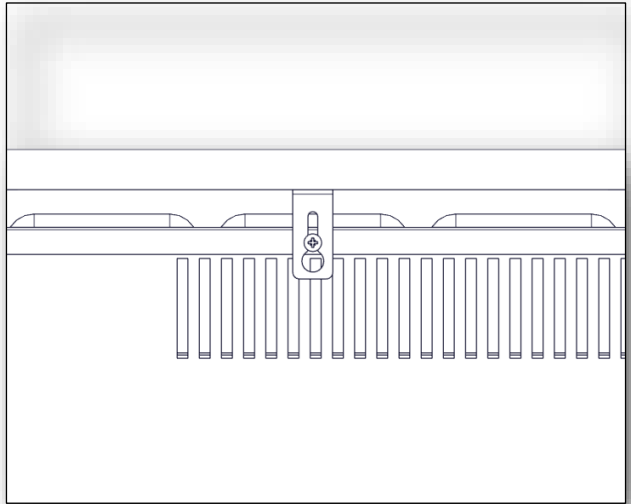

Pre-plan and prepare the routing for the fire power cable.
With second persons help lift the suite on to the pre-install wall brackets. Care must be taken to prevent the power cable being crushed or damaged on installation.

Confirm the suite is secured in place.


Note: The Suite is a two adult person lift.

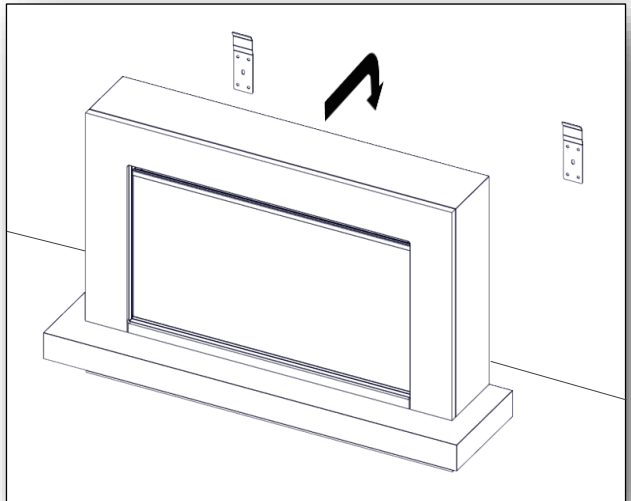

For additional security and to prevent the Suite from being accidentally lifted off the wall brackets. The suite has pre-drilled fixing holes in the hearth rear brace. Mark the position of the holes.

Lift the suite off the wall, then drill and plug the wall where marked.

Lift the suite back in to place and fix securely in place using appropriate fixings, dependent on the wall type. **See 'Important Note' on page 9.**

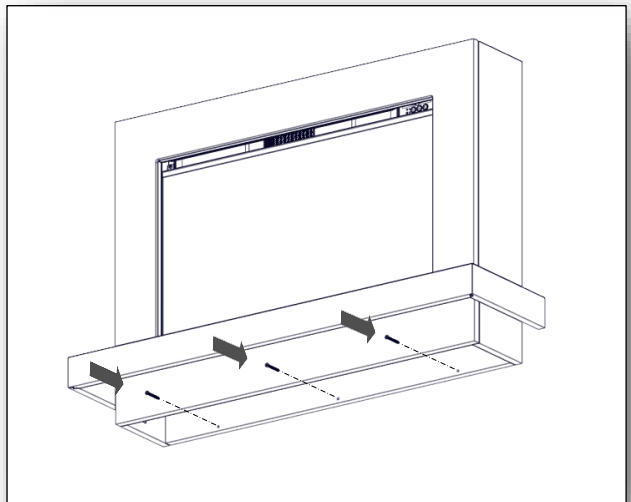


Finally confirm the suite is installed level and securely fixed in place.

The suite installation is now complete.

Note: For information on how to dress the fuel bed and for fire operating instructions please scan the QR code and search for Instruction Number.

200888

Note: Should a defect be discovered and in the event of a Suite being permanently fixed to the wall the householder will be responsible for any costs incurred.

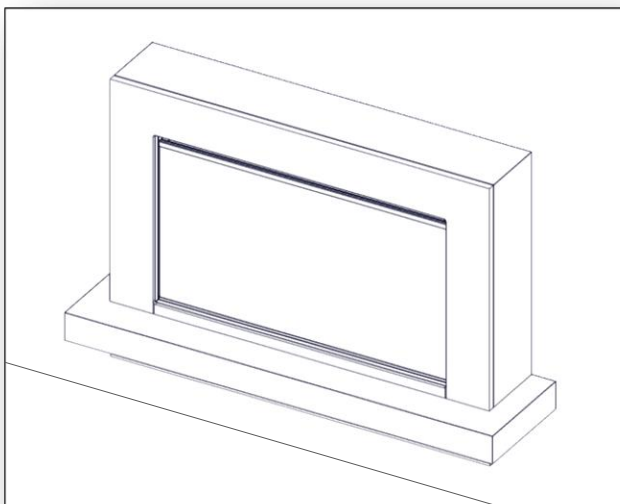

Maintenance

WARNING: Before any maintenance or whilst cleaning the exterior of the fireplace, the unit should be disconnected from the power supply until it has cooled down.

Cleaning the Fire

Cleaning or polishing products are not recommended. Fingerprints or other marks on the front glass panel can be removed by a piece of soft, damp, lint-free cloth with a good quality household glass cleaner. The front glass panel should always be completely dried with a clean, lint-free cloth or paper towel.

CAUTION: Abrasive cleaners should not be used on the glass panel. Liquids should not be sprayed directly onto any surface of the unit.

Troubleshooting

Should you have any queries regarding this product please contact Customer Services on 0191 4300901 (option 4) or email us at customerservices@bemodern.co.uk

Recycling

All cardboard packing is recyclable

IMPORTANT NOTE:

Wall fixings (i.e. screws/wall plugs etc.) are not supplied as these are crucially dependent upon the type of wall and surface the Suite is going to be fixed too.

The installer is therefore responsible for ensuring that suitable fittings are used as well as individual fitting situations and environments. All mechanical fixings, for holding the Suite in position, must be secured to a solid wall or structure.

Where appropriate please recycle packaging responsibly.
